Declaration

Copyright MY COMPANY. All rights reserved.

Contents in this Manual are not allowed to copy, extract and translate before being allowed by MY Company.

Digital Storage Oscilloscope Brief Introduction

Model

500MSa/s real–time sampling rate Series Bandwidth: 25MHz,40MHz,60MHz,100MHz
1GSa/s real–time sampling rate Series Bandwidth: 40MHz,60MHz,100MHz,150 MHz,200MHz

Characteristic

- The volume of the oscilloscope is cabinet and it is portable
- Color TFT LCD display
- Double channels, Bandwidth: 25MHz,40MHz,60MHz,100MHz,150MHz,200MHz
- Single real–time sampling rate are 500MSa/s or 1Gsa/s; Equivalent sampling rate is 50GSa/s.
- Memory depth are 4Kpts&32 Kpts(500MSa/s real-time sampling rate), 40Kpts&2Mpts (1GSa/s real-time sampling rate)
- Edge, Pulse, Video，Slope，and Alternative trigger function.
- Unique Digital Filter function and Waveform recorder function
- Pass/Fail function.
- Auto measure thirty two parameters support all measurement function.
- Two groups' reference waveforms and twenty groups' capture waveforms and twenty groups' setups internal save/recall function and USB flash drive save/recall function.
- Cursor measure covers Manual mode, Track mode and Auto mode.
- Channel waveform and its FFT waveform display on split screen.
- Waveform Intensity and Grid Brightness can be adjusted.
- Menu display in the form of pop–up that in order to convenience users to use it.
- Rich Screen display styles: Classical, Modern, Tradition, Succinct.
- Multiple Language User Interface.
- Support Multilingual help system online.
- Standard setup interface: USB Host: Support USB flash drive storage/recall function and update firmware; USB Device: Support PictBridge compatible printer and support PC remote control; RS–232;Pass/Fail output.

Digital Storage Oscilloscope Accessories:

- 1:1/10:1 probe (2 PCS)
- Power Cable that fits the standard of destination country
- Certification.
- Guaranty card
- CD(including EasyScope3.0 computer software system)
- User Manual
- USB cable

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified.
Only qualified personnel should perform service procedures.

To Avoid Fire or Personal Injury

- Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.
- Connect and Disconnect Properly. Do not connect or disconnect probes or test leads while they are connected to a voltage source.
- Ground the Product. This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.
- Connect the Probe Properly. The probe ground lead is at ground potential. Do not connect the ground lead to an elevated voltage.
- Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and marking on the product. Consult the product manual for further ratings information before making connections to the product.
- Do Not Operate Without Covers. Do not operate this product with covers or panels removed.
- Use Proper Fuse. Use only the fuse type and rating specified for this product.
- Avoid Exposed Circuitry. Do not touch exposed connections and components when power is present.
- Do Not Operate With Suspected Failures. If you suspect there is damage to this product, have it inspected by qualified service personnel.
- Do Not Operate in Wet/Damp Conditions.
- Do Not Operate in an Explosive Atmosphere.
- Keep Product Surfaces Clean and Dry.

Power Line Conducted Emission Limits(Class B)
Measuring standard:EN61326:1998+A1,2002+A2,2003

Safety Terms and Symbols

Terms on the Product. These terms may appear on the product:
DANGER:
Indicates an injury hazard immediately accessible as you read the marking.
WARNING:
Indicates an injury hazard not immediately accessible as you read the marking.
CAUTION:
indicates a hazard to property including the product.

Symbols on the Product. These symbols may appear on the product:

Warning high voltage (Earth)

Protective Ground Terminal

Caution Refer to Manual

Earth Terminal

Preface

This manual contains operating information for the Digital Storage Oscilloscopes.
The manual consists of the following chapters:

- Accidence chapter describes the front panel; display area of the oscilloscope; Functional Check and Probe Compensation briefly.
- Functions Instruction and Operation chapter describes function and operation of the Oscilloscope systemically.
- Application Examples chapter includes examples of a wide variety of measurements to give you ideas on how to solve your measure problems.
- Prompting messages and Troubleshooting chapter describes prompting messages and describes some ways of troubleshooting.
- Service and Support chapter introduce warranty and technology of the products.
- Appendix A: Specifications chapter introduce specifications of the oscilloscopes
- Appendix B: Oscilloscope Accessories chapter briefly describes standard accessories.
- Appendix C: Default Setup chapter contains a list of the menus and controls with the default (factory) settings that are recalled when you push the DEFAULT SETUP front–panel button.
- Appendix D: Daily Maintain and Cleaning chapter describes how to take care of the oscilloscope.

Catalogue

Digital Storage Oscilloscope Brief Introduction.....II
General Safety Summary.....III
Preface.....V

Chapter 1 Accidence.....01
1.1 Accidence of the front panel and user interface.....01
1.2 Function checking.....03
1.3 Probe.....04
1.3.1 Probe Safety.....04
1.3.2 Probe Attenuation Setting.....04
1.3.3 Probe Compensation.....05

Chapter 2 Functions Instruction and Operation.....06
2.1 Menu and control button.....06
2.2 Connector.....08
2.3 Auto setup.....08
2.4 Default setup.....10
2.5 Universal knob.....10
2.6 Vertical System.....11
2.6.1 CH1 & CH2 Channel.....11
2.6.2 The Using of the Vertical Position knob and Volt/div knob in the vertical system.....16
2.6.3 Math Functions.....17
2.6.4 Using Ref.....24
2.7 Horizontal System.....26
2.7.1 Horizontal control knob.....27
2.7.2 Window Zone.....28
2.8 Trigger System.....30
2.8.1 Signal Source.....31
2.8.2 Trigger Type.....31
2.8.3 Coupling.....45
2.8.4 Position.....45
2.8.5 Slope & Level.....46
2.8.6Trigger Holdoff.....47
2.9 Acquiring Signals system.....48
2.10 Display System.....53
2.10.1 X–Y Format.....57
2.11 Measure System.....59
2.11.1 Scale Measurement.....59
2.11.2 Cursor Measurement.....59
2.11.3 Auto Measurement.....64

2.12 Storage System.....70
2.13 Utility System.....83
2.13.1 System status.....87
2.13.2 Language.....87
2.13.3 Print.....88
2.13.4 Self Calibration.....91
2.13.5 Self Test.....92
2.13.6 Update Firmware.....94
2.13.7 Pass/Fail.....94
2.13.8 Waveform Record.....98
2.13.9 Recorder.....101
2.14 Online Help Function.....103

Chapter3 Application Examples.....104
3.1 Taking Simple Measurements.....104
3.2 Taking Cursor Measurements.....105
3.2.1 Measuring Ring Frequency.....105
3.2.2 Measuring Ring Amplitude.....106
3.3 Catch the single signal.....107
3.4 Analyze the signal detail.....107
3.4.1 Looking at a Noisy Signal.....107
3.4.2 Separating the Signal from Noise.....108
3.5 Triggering on a Video Signal.....108
3.5.1Triggering on Video Field.....108
3.5.2 Triggering on Video Lines.....108
3.6 Application of X–Y function.....109
3.7 Analyzing a Differential Communication Signal.....110

Chapter 4 prompting messages and troubleshooting.....111
4.1 Prompting messages:.....111
4.2 Troubleshooting.....112

Chapter 5 Service and Support.....114
5.1 Maintain summary.....114

Appendix A: Specifications.....115
Appendix B: Oscilloscope Accessories.....120
Appendix C: Default setup.....120
Appendix D: Daily Maintain and Cleaning.....123
Daily Maintain.....123
Cleaning.....123

CHAPTER 1 ACCIDENCE

Digital Storage Oscilloscope is mini–type and portable bench type instruments, which could be used for measuring as the GND voltage.
This Chapter shows you how to operate following tasks:

- Accidence of the front panel and user interface
- Simple checking of functions
- Probe compensation
- Matching probes attenuation coefficient

1.1 Accidence of the front panel and user interface

It is important for you to understand the DSO's front panel before operating it. The following contents are the brief introduction for the front panel function, which is useful to be familiar with the operation of the Digital Storage Oscilloscope in short time.

1.1.1 Front Panel

The oscilloscopes provides an easy–to–use front panel to convenience users to operate them, the panel contains knobs and buttons. There is a list of five ashen buttons as menu operational buttons on the right of display screen. You can set different options of the current menu in virtue of them. Other buttons are function buttons; you can enter different function menus or obtain given function application in virtue of them.

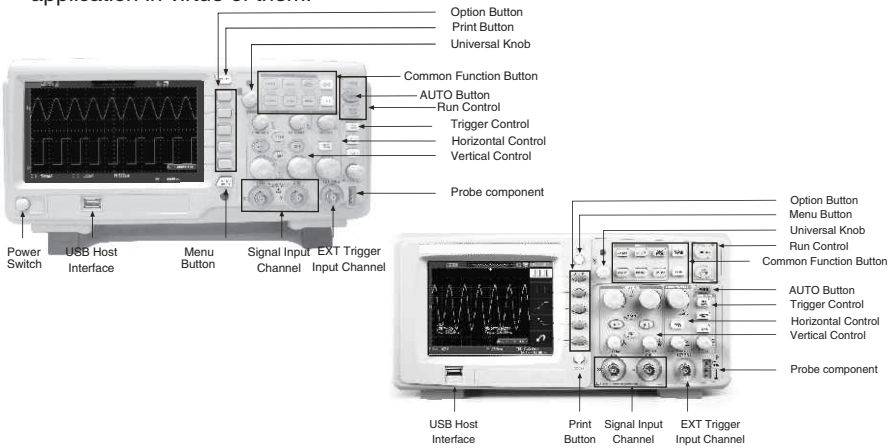

Picture 1–1 Front Panel Controls

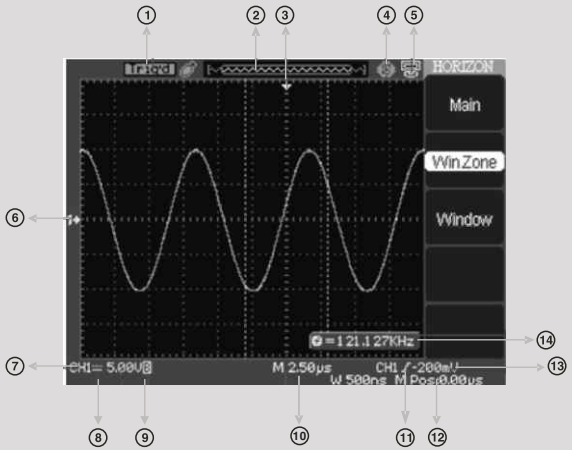

Picture 1–2 Display area

1. Trigger status
   Armed:The oscilloscope is acquiring pre–trigger data. All triggers are ignored in this state.
   Ready: All pre–trigger data has been acquired and the oscilloscope is ready to accept a trigger.
   Trig'd: The oscilloscope has seen a trigger and is acquiring the posttrigger data.
   Stop: The oscilloscope has stopped acquiring waveform data.
   Auto: The oscilloscope is in auto mode and is acquiring waveforms in the absence of triggers.
   Scan: The oscilloscope is acquiring and displaying waveform data continuously in scan mode.
2. Display the position of the present waveform window
3. Marker shows horizontal trigger position. Turn the HORIZONTAL POSITION knob to adjust the position of the marker.
4. Print Key option is set to Print Picture.
   Print Key option is set to Save Picture.
5. Back USB option is set to Computer.
   Back USB option is set to Printer.
6. Show the waveform's channel position.
7. Signal Coupling symbol.
8. Readout shows the vertical factor of the channels.
9. "B" icon shows that bandwidth function is open.
10. Readout shows the main time base setting.
11. Icon shows the trigger type for the triggering

12. Readout shows the horizontal position.
13. Readout shows the trigger voltage.
14. Readout shows present signal frequency.

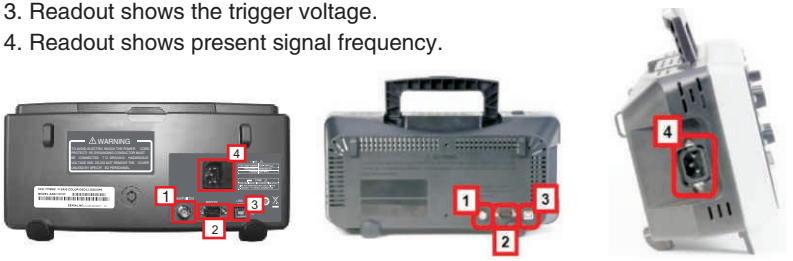

Picture 1–3

1.Pass/Fail Output
2.RS–232 Connector
3.Back USB Connector
4.Power Input Connector

1.2 Function checking

When you check whether or not the oscilloscope could work smoothly, please operate as following:

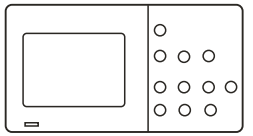	1. Power On the oscilloscope.Press DEFAULT SETUP to show the result of the self check. The probe default attenuation is 1X.
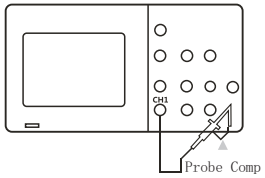	2. Set the switch to 1X on the probe and connect the probe to channel 1 on the oscilloscope. To do this, align the slot in the probe connector with the key on the CH 1 BNC, push to connect, and twist to the right to lock the probe in place. Connect the probe tip and reference lead to the PROBE COMP connectors
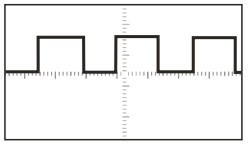	3. Press AUTO to show the 1 KHz frequency and about 3V peak–peak square wave in couple seconds
	4. Press CH1 two times to cancel the channel 1, PressCH2 to change screen into channel 2, reset the channel 2 as step 2 and 3.

1.3 Probe

1.3.1 Probe Safety

A guard around the probe body provides a finger barrier for protection from electric shock.

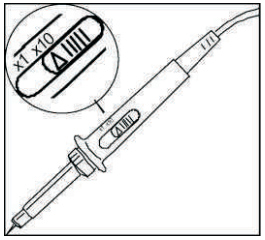

Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.

> Note
> 1. To avoid electric shock when using the probe, keep fingers behind the guard on the probe body.
> 2. To avoid electric shock while using the probe, do not touch metallic portions of the probe head while it is connected to a voltage source. Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.

1.3.2 Probe Attenuation Setting

Probes are available with various attenuation factors which affect the vertical scale of the signal. The Probe Check function verifies that the Probe attenuation option matches the attenuation of the probe.

You can push a vertical menu button (such as the CH 1 MENU button), and select the Probe option that matches the attenuation factor of your probe.

> Note
> 1. The default setting for the Probe option is 1X.

Be sure that the attenuation switch on the probe matches the Probe option in the oscilloscope. Switch settings are 1X and 10X.

> Note
> 1. When the attenuation switch is set to 1X, the probe limits the bandwidth of the oscilloscope to 10MHz. To use the full bandwidth of the oscilloscope, be sure to set the switch to 10X

1.3.3 Probe Compensation

As an alternative method to Probe Check, you can manually perform this adjustment to match your probe to the input channel.

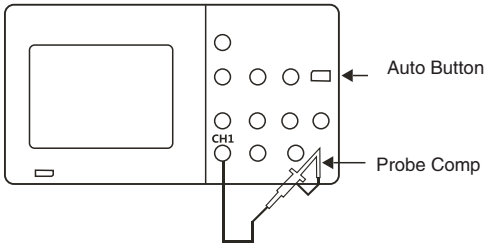

1. Set the Probe option attenuation in the channel menu to 10X. Set the switch to 10X on the probe and connect the probe to channel 1 on the oscilloscope. If you use the probe hook–tip, ensure a proper connection by firmly inserting the tip onto the probe.
2. Attach the probe tip to the PROBE COMP ~ 3V connector and the reference lead to the PROBE COMP Ground connector. Display the channel and then push the “AUTO” button.
3. Check the shape of the displayed waveform.

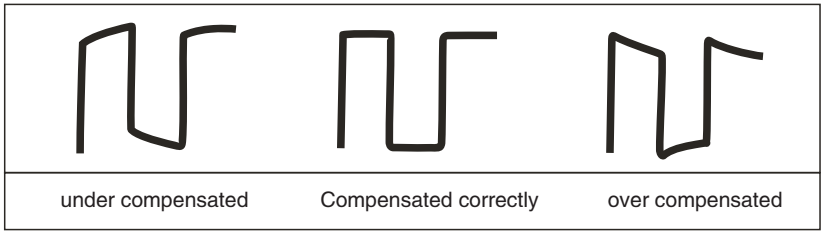

4. If necessary, adjust your probe. Repeat as necessary.

CHAPTER 2 FUNCTIONS INSTRUCTION AND OPERATION

To use your oscilloscope effectively, you need to learn about the following oscilloscope functions:

- Menu and control button
- Auto Setup
- Universal knob
- Horizontal System
- Acquiring signals System
- Measuring waveforms System
- Utility System
- Connector
- Default Setup
- Vertical System
- Trigger System
- Display System
- Storage System
- Online Help function

2.1 Menu and control button

Showing as the following picture:

All models:

- CH1、CH2: Channel 1, channel 2 menu control button.
- MATH: MATH function control button.
- REF: Reference waveforms control button.
- HORI MENU: Horizontal control button.
- TRIG MENU: Trigger control button.
- SET TO 50%: Set the trigger level to midpoint of the signal amplitude.
- FORCE: Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for Single acquisitions and Normal trigger mode.
- SAVE/RECALL: Display the Save/Recall Menu for setups and waveforms.
- ACQUIRE: Display the Acquire Menu.
- MEASURE: Display the automated measurements menu.
- CURSORS: Display the Cursor Menu. Vertical Position controls adjust cursor position while displaying the Cursor Menu and the cursors are activated. Cursors remain displayed (unless the Type option is set to Off) after leaving the Cursor Menu but are not adjustable.
- DISPLAY: Display the Display Menu.
- UTILITY: Display the Utility Menu.
- DEFAULT SETUP: Recall the factory setup.
- HELP: Enter the online help system.
- AUTO: Automatically sets the oscilloscope controls to produce a usable display of the input signals.
- RUN/STOP: Continuously acquires waveforms or stops the acquisition. Note：If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), the SEC/DIV control expands or compresses the waveform.
- SINGLE: Acquire a single waveform and then stops.

2.2 Connector

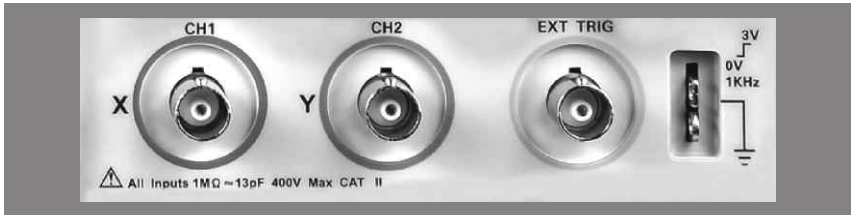

- CH1、CH2: Input connectors for waveform display.
- EXT TRIG: Input connector for an external trigger source. Use the Trigger Menu to select the Ext or Ext/5 trigger source.
- Probe Component: Voltage probe compensation output and ground. Use to electrically match the probe to the oscilloscope input circuit.

Note

1. If you connect a voltage source to a ground terminal, you may damage the oscilloscope or the circuit under test. To avoid this, do not connect a voltage source to any ground terminals.

2.3 Auto setup

The Digital Storage Oscilloscopes have auto setup function, which can identify the type of waveform and adjust controls to produce a usable display of the input signal. AUTO is the auto Set up button.

Table 2–1 Auto set function Menu:

Option		Introduction
⎍⎍⎍	Multi–cycle sine	Auto set the screen and display several cyc signal.
⎍	Single–cycle sine	Set the screen and auto display single cyc signal.
⎍	Rising edge	Auto set and show the rising time.
⎍	Falling edge	Auto set and show the falling time.
↶	Undo Setup	Causes the oscilloscope to recall the previous setup.

Auto set determines the trigger source based on the following conditions:

- If multiple channels have signals, channel with the lowest frequency signal.
- No signals found, the lowest–numbered channel displayed when Auto set was invoked
- No signals found and no channels displayed, oscilloscope displays and uses channel 1.

Input a signal to Channel 1, press the Auto button (See picture 2–3):

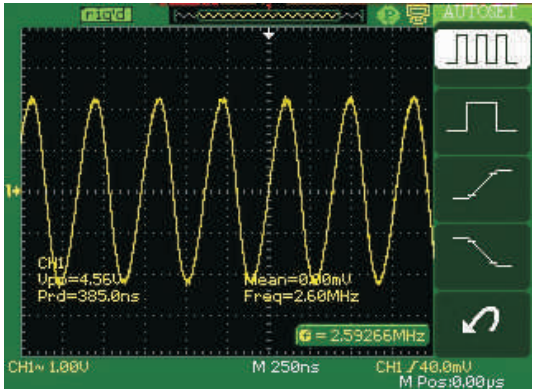

Table 2–2 Auto set the function item

Function	Setting
Acquire Mode	Adjusted to Sampling
Display Format	Y–T
Display Type	Set to Dots for a video signal, set to Vectors for an FFT spectrum; otherwise, unchanged
Vertical Coupling	Adjusted to DC or AC according to the input signal
Bandwidth Limit	Off(full)
V/div	Adjusted
VOLTS/DIV adjustability	Coarse
Signal inverted	Off
Horizontal position	Center
S/div	Adjusted
Trigger type	Edge
Trigger source	Auto detect the channel which has the input signal
Trigger slope	Rising
Trigger mode	Auto
Trigger coupling	DC
Trigger holdoff	Minimum
Trigger level	Set to 50%

2.4 Default Setup

The oscilloscope is set up for normal operation when it is shipped from the factory. This is the default setup. To recall this setup, press the DEFAULT SETUP button. The options, buttons and controls that change settings when you press the DEFAULT SETUP button, refer to appendix C.

The DEFAULT SETUP button does not reset the following settings:

- Language option
- Saved reference waveform files
- Saved setup files
- Display contrast
- Calibration data

2.5 Universal knob

◄ Universal knob

The Digital Storage Oscilloscope has a special knob–the Universal knob, Using this knob can adjust the holdoff time, move cursors, set the pulse width, Set the Video Linage, adjust frequency upper limit or frequency lower limit of the digital filter, adjust x mask and y mask in pass/fail function and adjust the record frame or play back frame in waveform record menu etc. You can turn the Universal knob to adjust the storage position of setups, waveforms, pictures to save or recall them, and you can adjust the Universal knob to select menu option.

2.6 Vertical System

Showing as follow picture, the buttons and knobs are useful in the vertical system

◄ Volt/div knob

◄ Vertical POSITION knob

The vertical control, which each channel has, could be used for displaying waveform, rectify scale and position.

2.6.1 CH1 & CH2 Channel

Table 2–3 CH1 & CH2 function menu 1:

Option	Setting	Introduction
Coupling	DC	DC passes both AC and DC components of the input signal.
	AC	AC blocks the DC component of the input signal and attenuates signals below 10 Hz.
	GND	GND disconnects the input signal.
BW limit	On Off	Limits the bandwidth to reduce display noise; filters the signal to reduce noise and other unwanted high frequency components.
Volts/Div	Coarse	Selects the resolution of the Volts/Div knob Coarse defines a 1–2–5 sequence.
	Fine	Fine changes the resolution to small steps between the coarse settings.
Probe	1X 10X 100X 1000X	Set to match the type of probe you are using to ensure correct vertical readouts.
Next Page	Page 1/2	Press this button to enter second page menu.

Table 2–4 CH1 & CH2 function menu 2:		
Option	Setting	Instruction
Invert	On	Turn on invert function.
	Off	Turn off invert function.
Input	1MΩ	Setup 1MΩ as input impedance
Digital Filter		Press this button to enter the Digital Filter menu.(See table 2–5)
Next Page	Page 2/2	Press this button to return the first page menu.

Table 2–5 Digital Filter function menu:		
Option	Setting	Instruction
Digital Filter	On	Turn on the digital filter.
	Off	Turn off the digital filter.
Type		Setup as LPF(Low Pass Filter).
		Setup as HPF(High Pass Filter).
		Setup as BPF(Band Pass Filter).
		Setup as BRF(Band Reject Filter).
Upper_limit		Turn the Universal knob to set upper limit.
Lower_limit		Turn the Universal knob to set lower limit.
Return		Return the digital filter main menu.

- GND Coupling: Use GND coupling to display a zero–volt waveform. Internally, the channel input is connected to a zero–volt reference level.
- Fine Resolution：The vertical scale readout displays the actual Volts/Div setting while in the fine resolution setting. Changing the setting to coarse does not change the vertical scale until the VOLTS/DIV control is adjusted.
- Wave Cancel：Press the menu button for the channel to display its vertical menu. Push the menu button again to remove the waveform.

Note

1. The oscilloscope vertical response rolls off slowly above its bandwidth , which depending on the model, or 20 MHz when the Bandwidth Limit option isset to On. Therefore, the FFT spectrum can show valid frequency information higher than the oscilloscope bandwidth. However, the magnitude information near or above the bandwidth will not be accurate.
2. If the channel is set to DC coupling，you can quickly measure the DC component of the signal by simply nothing its distance from the ground symbol
3. If the channel is set to AC coupling，the DC component of the signal is blocked allowing you to use greater sensitivity to display the AC component of the signal..

Setting up the CH1、CH2 Channels

Each channel has its own separate Menu. The items are set up separately according to each channel.

1. Set up the channel couple

Take the CH1 for example; the tested signal is a sine wave signal with DC deflection:

- PressCH1→Coupling→AC, Set to AC couple mode. It blocks the DC component of the input signal.
- PressCH1→Coupling→DC, Set to DC couple mode. Both DC and AC component could be obstructed.
- PressCH1→Coupling→GND, Set to GROUND mode. It disconnects the input signal.

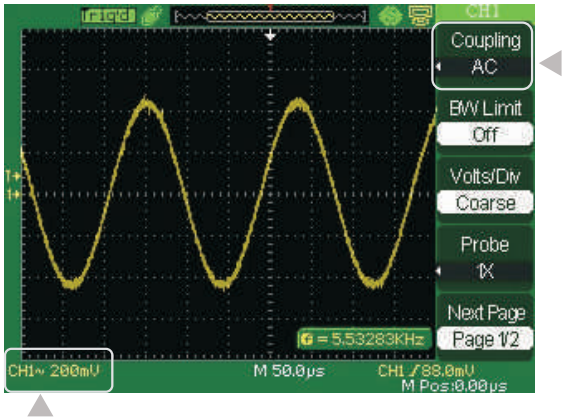

2. Set up the channel bandwidth limit

Take the CH1 for example; the tested signal is a pulse signal with the high frequency surge:

- Press Ch1→BW Limit→ On，Set the band width Limited to open state. The high frequency component which is higher than 20MHz obstructed.
- PressCH1→BW Limit→ Off, Set bandwidth Limited to close state, the High Frequency component in the tested signal could pass.

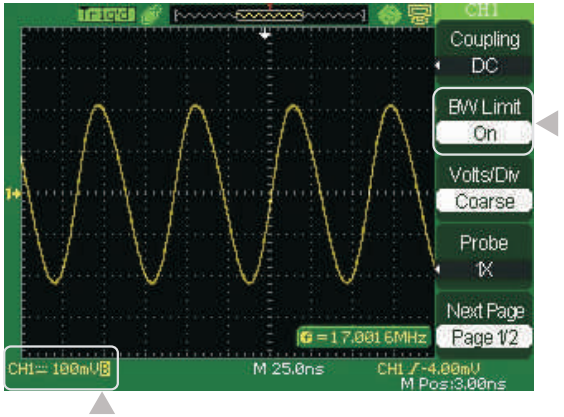

● Set bandwidth to 20MHZ
○ Set off bandwidth

● Bandwidth Limit Symbol

3. Volts/Div Settings

Vertical scale adjust have Coarse and fine two modes, Vertical sensitivity range is 2mV/div ~ 5V/div scale or 2mV/div ~ 10V/div scale.

Take the CH1 for example:

- Press "CH1" → "Volts/Div" → "Coarse" . It is the default setting of Volts/Div, and it makes the vertical scaling in a 1–2–5–step sequence from 2mv/div, 5mv/div, 10mv/div to 10v/div.
- Press Ch1" → Volts/Div" → Fine" . This setting changes the vertical to small steps between the coarse settings. It will be helpful when you need to adjust the waveform vertical size in smooth steps.

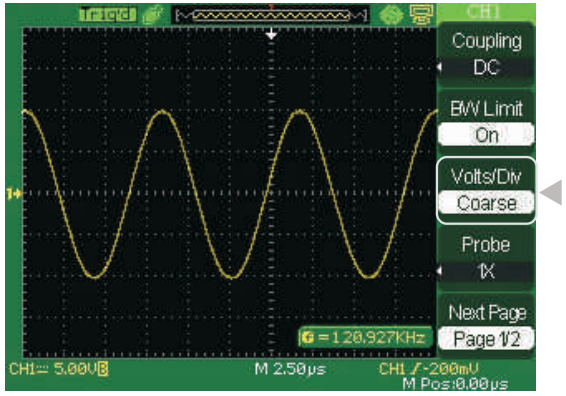

● Set to Coarse
○ Set to Fine

4. Probe attenuation set

In order to assort the attenuation coefficient, you need to response in the channel operation Menu. If the attenuation coefficient is 10:1, the input coefficient should be set to 10X, so that the mistake of the Volts/div information and measure testing should be forbidden.

Take the CH1 for example, when you use the 100:1 probe:

- PressCH1→Probe →100X

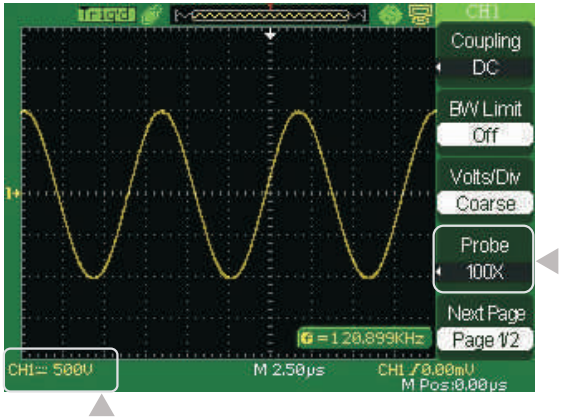

● Probe attenuation factor

● Status changes with the probe attenuation

5. To invert a waveform

Take the Ch1 for example:

- PressCH1→Invert→On:
- PressCH1→Invert→Off:

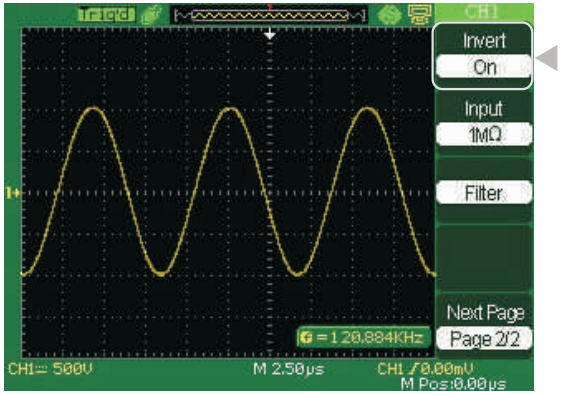

● On
○ Off

6. Digital Filter

- Press Ch1→Next Page→ Filter, display the digital filter menu. Select Filter Type, then select Upper Limit or Lower Limit and turn the Universal knob to adjust them.
- Press Ch1→Next Page→ Filter →Off. Turn off the Digital Filter function.
- Press Ch1→Next Page→ Filter → On. Turn on the Digital Filter function.

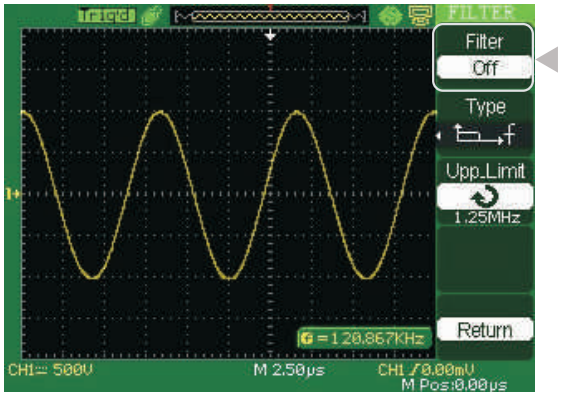

● On
○ Off

2.6.2 The Using of the Vertical Position knob and Volt/div knob in the vertical system

- Vertical POSITION knob
  1. Use the Vertical POSITION knobs to move the channel waveforms up or down on the screen. This button's resolution is variety as per the vertical scale.
  2. When you adjust the vertical position of channels waveforms, the vertical position information will display on the left bottom of screen. For example Volts Pos=24.6mV.
  3. Press the vertical POSITION knob to set the vertical position to zero.

- Volts/div knob
  1. Use the Volts/div knobs to control how the oscilloscope amplifies or attenuates the source signal of channel waveforms. When you turn the volts/div knob, the oscilloscope increases or decreases the vertical size of the waveform on the screen with respect to the ground level.

2. When you press the Volt/div Knob, you can switch Volt/div option between Coarse and Fine. The vertical scale is made sure by the 1–2–5 step in the Coarse. Increase in the clockwise, reduce in the anticlockwise. In the fine mode, the knob changes the Volts/Div scale in small steps between the coarse settings. Increase in the clockwise, reduce in the anticlockwise.

2.6.3 Math Functions

Math shows the results after +,–,*and FFT operation of the CH1 and CH2. Press the MATH button to display the waveform math operations. Press the MATH button again to remove the math waveform display.

Table 2–6 MATH function menu:

Function	Setting	Introduction
Operation	+、–、*、FFT	Source 1 plus Source 2.
CH1 Invert	On	Invert the CH1 waveform.
	Off	Turn off CH1 Invert function.
CH2 Invert	On	Invert the CH2 waveform.
	Off	Turn off CH2 Invert function.
		By rotating the universal knob to adjust the vertical positon of waveform after operation
		By rotating the universal knob to adjust the waveform vertical range after operation

Table 2–7 MATH function instruction

Function	Setting	Introduction
+	CH1+CH2	CH1 waveform adds CH2 waveform.
–	CH1–CH2	The channel 2 waveform is subtracted from the channel 1 waveform.
	CH2–CH1	The channel 1 waveform is subtracted from the channel 2 waveform.
*	CH1*CH2	Source 1 multiply source 2.
FFT		Fast Fourier Transform.

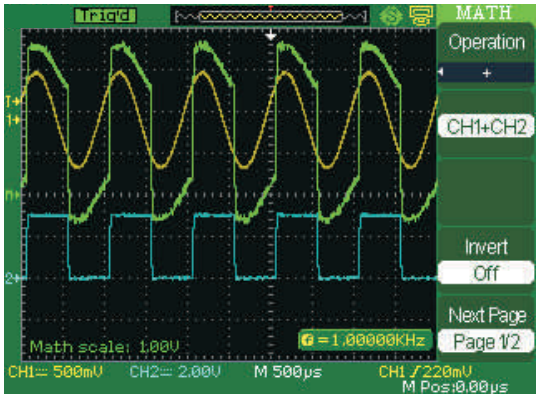

MATH Waveform CH1+CH2

1. FFT Spectrum Analyzer

The FFT process mathematically converts a time–domain signal into its frequency components. You can use the Math FFT mode to view the following types of signals:

- Analyze the Humorous wave in the Power cable.
- Test the Humorous content and distortion in the system
- Show the Noise in the DC Power supply
- Test the filter and pulse response in the system
- Analyze vibration

Table 2–8 FFT function menu 1:

Function	Setting	Introduction
Source	CH1 CH2	Select this channel as the FFT source.
Window	Hanning Hamming Rectangular Blackman	Select FFT window types.
FFT ZOOM	1X 2X 5X 10X	Changes the horizontal magnification of the FFT display.
Next Page	Page 1/2	Enter the second page of FFT menu.

Table 2–9 FFT function menu 2:

Function	Setting	Introduction
Scale	Vrms	Set Vrms to be the Vertical Scale unit.
	dBVrms	Set dBVrms to be the vertical Scale unit.
Display	Split	Display FFT waveform on half screen.
	Full screen	Display FFT waveform on full screen.
Next Page	Page 2/2	Return the first page of FFT menu.

To use the Math FFT mode, you need to perform the following tasks:

1. Set up the source (time–domain) waveform.
   - Press the AUTO button to display a YT waveform.
   - Turn the vertical POSITION knob to move the YT waveform to the center vertically (zero divisions).
   - Turn the horizontal POSITION knob to position the part of the YT waveform that you want to analyze in the center eight divisions of the screen.The oscilloscope calculates the FFT spectrum using the center 1024 points of the time–domain waveform.
   - Turn the Volts/div knob to ensure that the entire waveform remains on the screen.
   - Turn the S/div knob to provide the resolution you want in the FFT spectrum.
   - If possible, set the oscilloscope to display many signal cycles.

   To display FFT correctly, follow these steps:
   - Push the MATH button.
   - Set the Operation option to FFT.
   - Press the Source button to select CH1or CH2according to input signal channel.
   - According to Nyquist law, turn the S/div knob to adjust the sampling rate(This parameter is displayed behind the time base parameter) is at least double than input signal frequency.

2. Displaying the FFT Spectrum

Press the MATH button to display the Math Menu. Use the options to select the Source channel, Window algorithm, and FFT Zoom factor. You can display only one FFT spectrum at a time. You can select Full screen or Split in Display option to display FFT waveform on full screen or display channel waveform and its FFT waveform on half screen at a time.

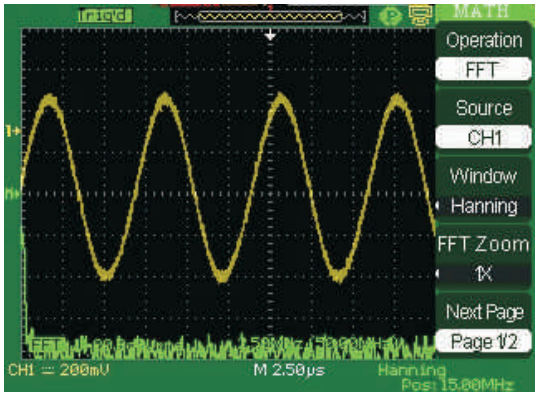

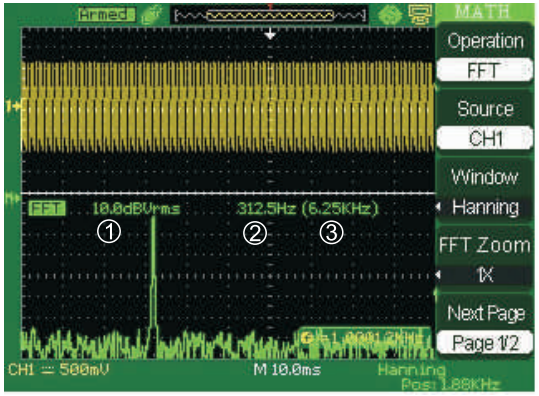

◀ FFT window

① Set dBVrms to be the vertical Scale unit

② Time base

③ Sampling rate

3. Select FFT window

Windows reduce spectral leakage in the FFT spectrum. The FFT assumes that the YT waveform repeats forever. With an integral number of cycles, the YT waveform starts and ends at the me amplitude and there are no discontinuities in the signal shape A non–integral number of cycles in the YT waveform causes the signal start and end points to be at different amplitudes. The transitions between the start and end points cause discontinuities in the signal that introduce high–frequency transients.

According to the tested options and source speciality, make sure the window you need to use.

Table 2–10 FFT window instruction

Function	Setting	Introduction
Rectangular	Best frequency resolution, worst magnitude resolution. This is essentially the same as no window.	Symmetric transients or bursts. Equal–amplitude sine waves with fixed frequencies. Broadband random noise with a relatively slowly varying spectrum.
Hanning Hamming	Better frequency, poorer magnitude accuracy than Rectangular. Hamming has slightly better frequency resolution than Hanning.	Sine, periodic, and narrow–band random noise. Asymmetic transients or bursts.
Blackman	Best magnitude, worst frequency resolution.	Single frequency waveforms, to find higher order harmonics.

4. Magnifying and Positioning an FFT Spectrum

You can magnify and use cursors to take measurements on the FFT spectrum. The oscilloscope includes an FFT Zoom option to magnify horizontally, press this option button to select 1X, 2X, 5X or 10X. Moreover, you also can turn the Universal knob to magnify FFT waveform horizontally in a 1–2–5 step. To magnify vertically; you can turn the Volts/div knob.

5. Measuring an FFT Spectrum Using Cursors

You can take two measurements on FFT spectrums: magnitude (in dB) and frequency (in Hz). Magnitude is referenced to 0 dB, where 0 dB equals 1 VRMS. You can use the cursors to take measurements at any zoom factor. (Refer to cursor measure2.11.2)

Use horizontal cursors to measure amplitude and vertical cursors to measure frequency.

If you input a sine signal to channel 1, follow these steps:

1. Measure FFT Amplitude

- Input a sine signal to channel 1, and press the AUTO button.
- Press the MATH button to enter the MATH menu.
- Press the Operation option button to select FFT.
- Press the Source option button to select Ch1.
- Press CH1 button to display CH1 menu.
- Turn the S/div knob to adjust sampling rate (at least double bigger than frequency of input signal).
- If FFT display on full screen, press CH1 button again to remove channel waveform display.
- Press the CURSOR button to enter Cursor menu.
- Press the Cursor Mode button to select Manual.
- Press the Type option button to select Voltage.
- Press the Source option button to select FFT.
- Press the CurA option button; turn the Universal knob to move Cursor A to the highest point of the FFT waveform.
- Press the CurBoption button, turn the Universal knob to move Cursor B to the lowest point of the FFT waveform.
- The amplitude (△T) displays on the top of the left screen.

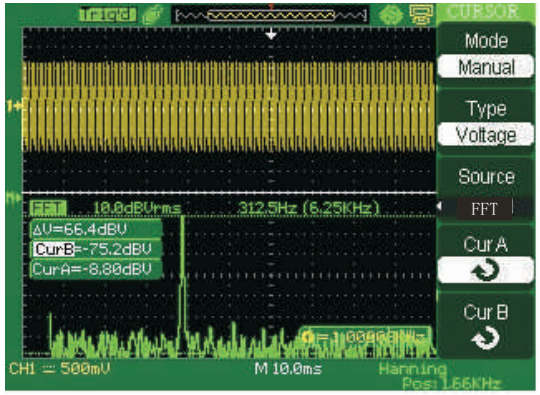

2.Measure FFT Frequency

- Press the CURSOR button.
- Press the Cursor Mode button to select Manual.
- Press the Type option button to select Time.
- Press the Source option button to select FFT.
- Press the Cur1 option button, turn the Universal button to move Cursor 1 to the highest position of the FFT waveform.
- The value of Cur1 displaying on the top of the left screen is FFT highest Frequency. This frequency should be the same as input signal frequency.

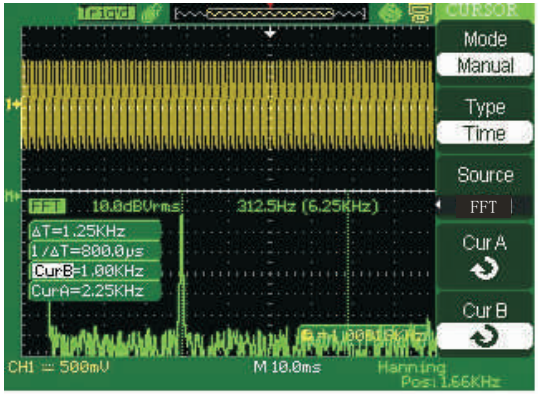

Note

1. The FFT of a waveform that has a DC component or offset can cause incorrect FFT waveform magnitude values. To minimize the DC component, choose AC Coupling on the source waveform.
2. To display FFT waveforms with a large dynamic range, use the dBVrms scale. The dBVrms scale displays component magnitudes using a log scale.
3. The Nyquist frequency is the highest frequency that any real–time digitizing oscilloscope can acquire without aliasing. This frequency is half that of the sample rate provided it is within the analog bandwidth of the oscilloscope. Frequencies above the Nyquist frequency will be under sampled, which causes aliasing.

2.6.4 Using Ref

The reference control saves waveforms to a nonvolatile waveform memory. The reference function becomes available after a waveform has been saved.

Table 2–11 REF function menu：

Option	Setting	Introduction
Source	CH1 CH2 CH1 Off CH2 Off	Choose the waveform display to store.
REFA REFB		Choose the reference location to store or recall a waveform.
Save		Stores source waveform to the chosen reference location.
REFA/REFB	On	Recall the reference waveform on the screen.
	Off	Turn off the reference waveform.

Press the Ref button to display the Reference waveform menu.

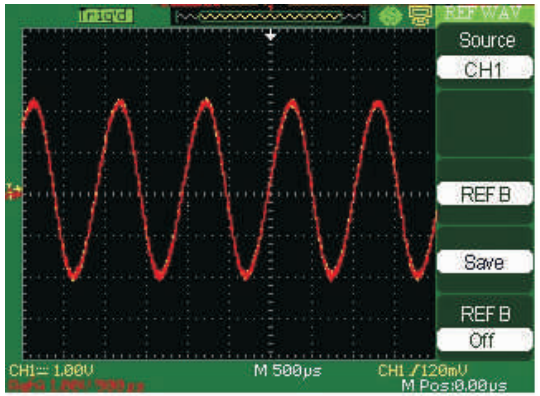

Operation step：

- Press the REF menu button to display the Reference waveform menu.
- Press the Source option button to select input signal channel.
- Turn the vertical POSITION knob and Volt/div knob to adjust the vertical position and scale to conformable positions.
- Press the third option button to select REFA or REFB as storage position.
- Press the Save option button.
- Press the bottom option button to select REFA On or REFB On to recall the reference waveform.

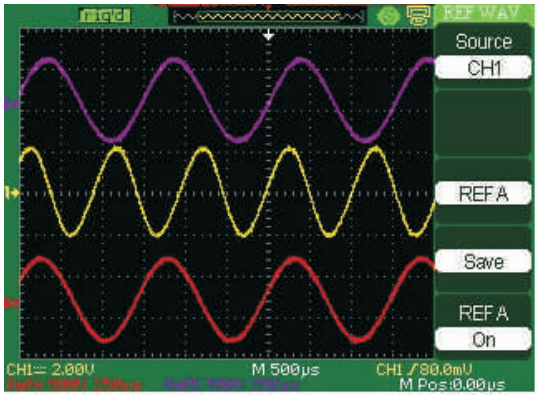

Note

1. X–Y mode waveforms are not stored as reference waveforms.
2. You cannot adjust the horizontal position and scale of the reference waveform.

2.7 Horizontal System

As follow Picture, there are one button and two knobs in the HORIZONTAL area.

Table 2– 12 4Kpts memory depth Series Horizontal system function menu：

Option	Introduction
Main	Display the waveform.
Win Zone	Two Cursors define one window; use horizontal POSITION and S/div to adjust the window.
Window	Change the display so that the waveform could be displayed in the window（expanded to screen width).

Table 2– 13 32K/40K/2Mpts memory depth Series Horizontal system function menu:

Option	Setting	Description
Main	Display the waveform.	
Delayed	On	Turn on this function that main timebase waveform display on the top half screen and window timebase wavefrom display on the below half screen at the same time.
	Off	Turn off this function that only display main timebase waveform on the screen.
MemDepth	Normal	memory depth to normal.
	Long MemSet	Set memory depth to long Memory depth in order to get more waveform dots.

Note

1. Only some series model DSO support Long Memory
2. If set memory depth to nomal mode, the momory depth is 40Kpts
2. If set memory depth to LongMem mode, the momory depth is 2Mpts

■ HORI MENU button:
Press the HORI MENU button to display the horizontal Menu. In this menu，you can turn window mode on or off. Otherwise, you could set the horizontal position knob to Trig–offset.

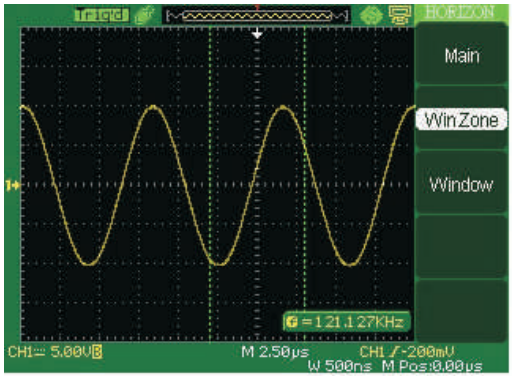

The axis of the vertical scale is GND level. The readout on the top right corner，which unit is sec, show us the horizontal position. M Mean main time base, W mean window time base.. It is also a arrow on the scale top to show the vertical position.

■ Window Zone:
Using Window Zone to define one wave sect, it is useful to reap the details. The Window time base setting cannot be set slower than the Main time base setting.

■ Window:
Expand the window to cover the whole screen.

2.7.1 Horizontal control knob

You can use the horizontal controls to change the horizontal scale and position of waveforms. The horizontal position readout shows the time represented by the center of the screen, using the time of the trigger as zero. Changing the horizontal scale causes the waveform to expand or contract around the screen center.

■ Horizontal POSITION knob
1. Adjust the horizontal position of all channels and math waveforms (the position of the trigger relative to the center of the screen). The resolution of this control varies with the time base setting.
2. When you press the horizontal POSITION Knob, you can set the horizontal position to zero.

■ S/div knob

1. Using to change the horizontal time scale to magnify or compress the waveform. If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), turn the S/div knob to expand or compress the waveform.
2. Select the horizontal time/div (scale factor) for the main or the window time base. When Window Zone is enabled, it changes the width of the window zone by changing the window time base.

■ Display scan mode：

When the SEC/DIV control is set to100 ms/div or slower and the trigger mode is set to Auto, the oscilloscope enters the scan acquisition mode. In this mode, the waveform display updates from left to right. There is no trigger or horizontal position control of waveforms during scan mode.

2.7.2 Window Zone

Use the Window Zone option to define a segment of a waveform to see more detail. The Window time base setting cannot be set slower than the Main time base setting. You can turn the Horizontal Position and SEC/DIV controls to enlarge or minish waveforms in the Window Zone.

If you want to see a section of the waveform in detail, follow these steps:
4Kpts memory depth Series real–time sampling rate series Operate steps:

- Press the HORI MENU button to enter the Horizontal menu.
- Press the Win Zone option button.
- Turn the S/div knob (adjust window's size) and turn the Horizontal Position knob (adjust window's position) to select the window that your need (see picture 2–27). The Window time base setting cannot be set slower than the Main time base setting.

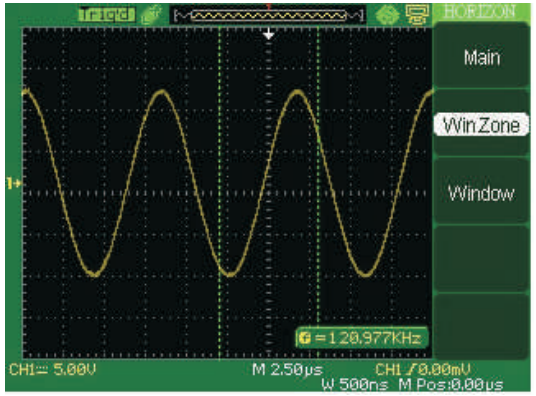

- Press the Window button. Now the window waveform has been expanded to cover the whole screen. (See picture 2–28)

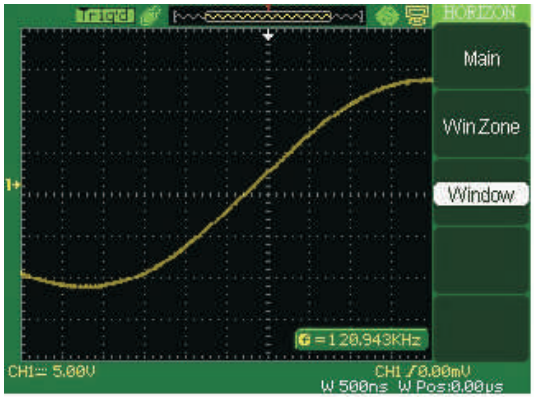

32K/40K/2Mpts memory depth Series operate steps:

- Press the HORI MENU button to enter the Horizontal menu.
- Turn the S/div knob to change the main timebase scale.
- Press the Delayed option button to select On.

Turn the Horizontal Position knob (adjust window's position) to select the window that your need and expanded window waveform display on the below half screen at the same time(See picture 2–28–1)

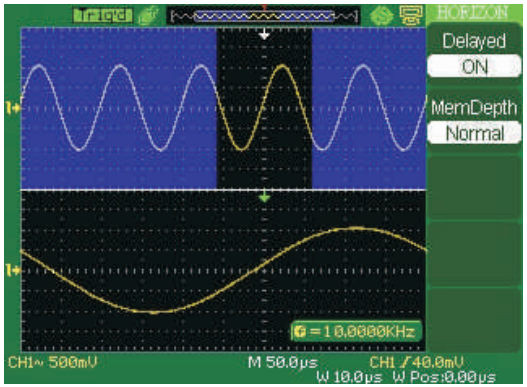

Note

1. 200MHz Bandwidth DSO memory depth only 5K/CH

2.8 Trigger System

The trigger determines when the oscilloscope starts to acquire data and display a waveform. When a trigger is set up properly, the oscilloscope converts unstable displays or blank screens into meaningful waveforms.

Here are three buttons and one Knob in the Trigger area. Showing as Picture.2–29:

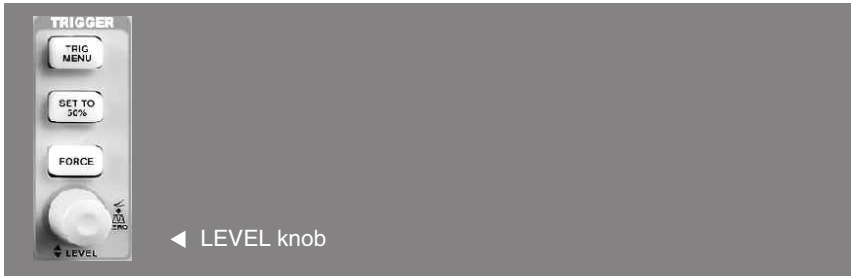

◄ LEVEL knob

- TRIG MENU Button: Press the TRIG MENU Button to display the Trigger Menu.
- LEVEL Knob: The LEVEL knob is to set the corresponding signal voltage of trigger point in order to sample. Press the LEVEL knob can set trigger level to zero.
- SET TO 50% Button: Use the SET TO 50% button to stabilize a waveform quickly. The oscilloscope can set the Trigger Level to be about halfway between the minimum and maximum voltage levels automatically. This is useful when you connect a signal to the EXT TRIG BNC and set the trigger source to Ext or Ext/5.
- FORCE Button: Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for SINGLE acquisitions and Normal trigger mode.
- Pre–trigger/Delayed trigger: The data before and after trigger the trigger position is typically set at the horizontal center of the screen, in the full–screen display the 6div data of pre–trigger and delayed trigger can be surveyed. More data of pre–trigger and 1s delayed trigger can be surveyed by adjusting the horizontal position.

The feature is very useful because you can see the events that led up the trigger point everything to the right of the trigger point is called posttrigger information the amount of delay range (pre–trigger and posttrigger information) available is dependent on the sweep speed selected.

2.8.1 Signal Source

You can use the Trigger Source options to select the signal that the oscilloscope uses as a trigger. The source can be any signal connected to a channel BNC, to the EXT TRIG BNC or the AC power line (available only with Edge triggers).

2.8.2 Trigger Type

The scopes have five trigger types: Edge, Video, Pulse, Slope, and Alternative.

■ Edge Trigger

Use Edge triggering to trigger on the edge of the oscilloscope input signal at the trigger threshold.

Table 2–14 Edge Trigger function Menu:

Option	Setting	Explain
Type	Edge	With Edge highlighted, the rising or falling edge of the input signal is used for the trigger.
Source	CH1 CH2	Triggers on a channel whether or not the waveform is displayed.
	EXT	Does not display the trigger signal; the Ext option uses the signal connected to the EXT TRIG front–panel BNC and allows a trigger level range of –1.2V to +1.2V.
	EXT/5	Same as Ext option, but attenuates the signal by a factor of five, and allows a trigger level range of +6V to –6V.This extends the trigger level range.
	AC Line	This selection uses a signal derived from the power line as the trigger source; trigger coupling is set to DC and the trigger level to 0 volts.
Slope	⌐	Trigger on Rising edge of the trigger signal.
	¬	Trigger on Falling edge of the trigger signal.
	↑↓	Trigger on Rising edge and Falling edge of the trigger signal.

Mode	Auto	Use this mode to let the acquisition free–run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the SINGLE button.
Set up		Enter the Trigger Setup Menu(See table 2–14).

Table 2–15 Trigger Setup function menu

Option	Setting	Explain
Coupling	DC	Passes all components of the signal
	AC	Blocks DC components and attenuates signals below 170 Hz.
	HF Reject	attenuates the high–frequency components above 140 kHz.
	LF Reject	Blocks the DC component and attenuates the low–frequency components below 7 kHz.
Holdoff		Using the universal knob to adjust holdoff time(sec)，the holdoff value is displayed.
Holdoff Reset		Reset holdoff time to 100ns.
Return		Return the first page of Trigger main menu.

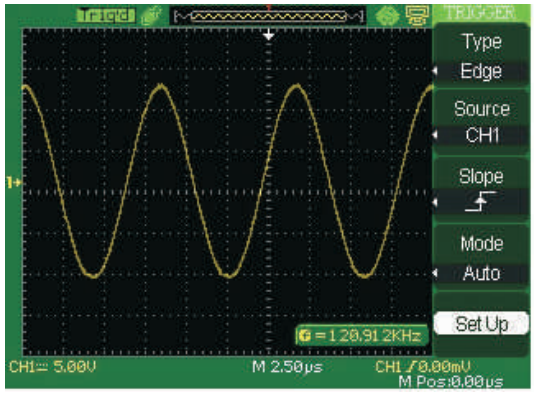

Operate Instruction:

1. Set up Type

- Press the TRIG MENU button to display Trigger menu.
- Press the Type option button to select Edge.

2. Set up Source

According to input signal, press the Source option button to select CH1, Ch2, EXT, EXT/5or AC Line.

3. Set up Slope

Press the Slope option button to select , or .

4. Set up Trigger mode

Press the Trigger mode option button to select Auto, Normal, Single.

Auto: The waveform refresh at a high speed whether the trigger condition is satisfied or not.

Normal: The waveform refresh when the trigger condition is satisfied and waits for next trigger event occurring when the trigger condition is not satisfied.

Single: The oscilloscope acquire a waveform when the trigger condition is satisfied and then stops.

5.Set up Trigger coupling

A. Press the Set up button to enter the Trigger Setup Menu.

B. Press the Coupling option button to select DC, AC, HF Reject or LF Reject.

■ Pulse Trigger：Use Pulse Width triggering to trigger on aberrant pulses.

Table 2–16 Pulse Trigger function Menu 1：

Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition.
Source	Ch1 CH2 EXT EXT/5	Select input signal source.
When	(Positive pulse width less than pulse width setting)	Select how to compare the trigger pulse relative to the value selected in the Set Pulse Width option.
	(Positive pulse width larger than pulse width setting)	
	(Positive pulse width equal to pulse width setting)	
	(Negative pulse width less than pulse width setting)	
	(Negative pulse width larger than pulse width setting)	
	(Negative pulse width equal to pulse width setting)	
Set Width	20.0ns ~ 10.0s	Selecting this option can turn the universal to set up the pulse width.
Next Page	Page 1/2	Press this button to enter the second page.

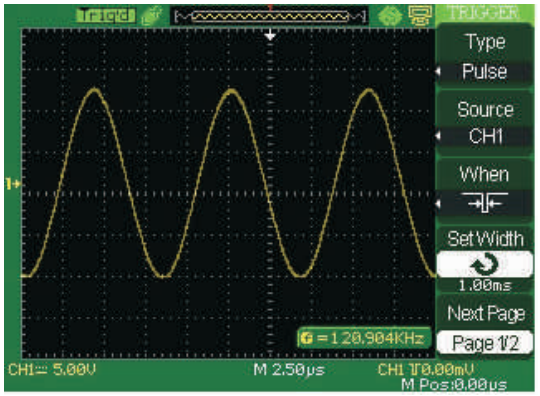

Table 2–17 Pulse Trigger function Menu 2：

Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition.
Mode	Auto Normal single	Select the type of triggering; Normal mode is best for most Pulse Width trigger applications.
Set up		Enter the Trigger setup menu.
Next Page	Page 2/2	Press this button to return the first page.

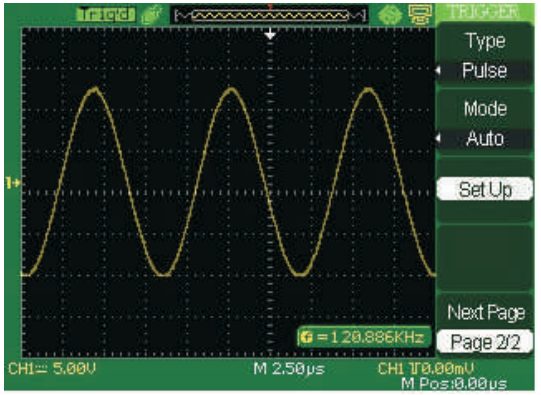

Operate Instruction:

1. Set up Type
- Press the TRIG MENU button to display Trigger menu.
- Press the Type option button to select Pulse.

2. Set up condition
Press the When option button to select ⊓⊔、⊓⊓、⊔⊓、⊔⊔、 ⊓⊔
or ⊓⊔。

3. Set up pulse width
Turn the Universal knob to set up width.

■ Video Trigger：Trigger on fields or lines of standard video signals.

Table 2–18 Functional Manu of Video Trigger 1:

Option	Setting	Introduction
Type	Video	When you select the video type, put the couple set to the AC, then you could trigger the NTSC,PAL and SECAM video signal.
Source	CH1 CH2	Select the input source to be the trigger signal.
	EXT EXT/5	Ext and Ext/5 use the signal applied to the EXT TRIG connector as the source.
Polarity	(Normal)	Normal triggers on the negative edge of the sync pulse.
	(Inverted)	Inverted triggers on the positive edge of the sync pulse.
Sync	Line Num All lines Odd field Even Field	Select appropriate video sync.
Next Page	Page 1/2	Enter the second page of Video trigger menu.

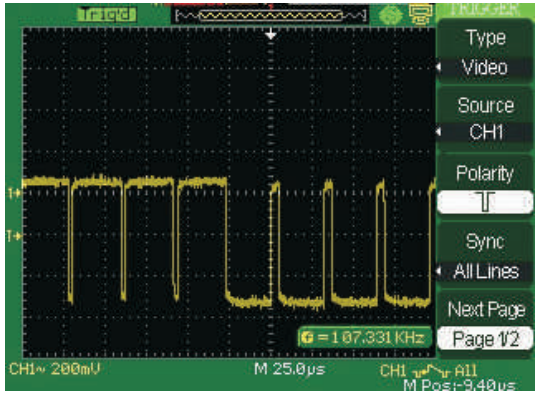

Table 2–19 Functional Manu of Video Trigger 2:

Option	Setting	Introduction
Type	Video	When you select the video type, put the couple set to the AC, then you could trigger the NTSC, PAL and SECAM video signal.
Standard	NTSC Pal/Secam	Select the video standard for sync and line number count.
Mode	Auto	Use this mode to let the acquisition free–run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the SINGLE button.
Set up		Enter the Trigger setup menu.
Next Page	Page 2/2	Return the first page of Video Trigger menu.

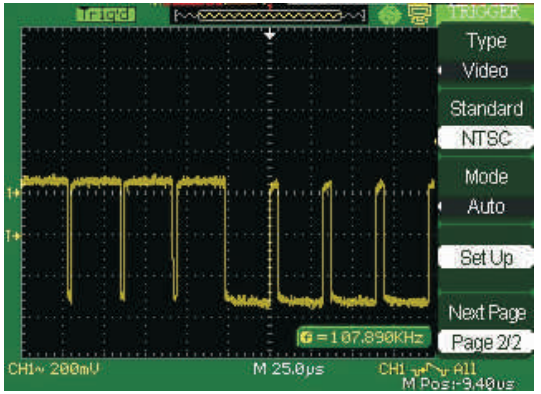

Operate Instruction:

1. Set up Type
   - Press the TRIG MENU button to display Trigger
   - Press the Type option button to select Video.

2. Set up Polarity
   - Press the Polarity option button to select ⎍or ⎍

3. Set up synchronization
   - Press the Sync option button to select All Lines, Line Num, Odd Field, and Even Field.
   - If you select Line Num, you can turn the Universal knob to set the appointed line number.

4. Set up Standard
   - Press the Next Page Page 2/2 option button.
   - Press the Standard option button to select PAL/SECAM or NTSC.

■ Slope Trigger：Trigger on positive slope of negative slope according to setup time of the oscilloscope.

Table 2–20 Slope trigger function menu 1

Option	Setting	Introduction
Type	Slope	Trigger on positive slope of negative slope according to setup time of the oscilloscope.
Source	CH1 CH2 EXT EXT/5	Select trigger source.
When		Select trigger condition.
Time	〈Set time〉	Turn the Universal knob to set slope time. Time setup range is 20ns–10s.
Next Page	Page 1/2	Enter the second page of slope trigger.

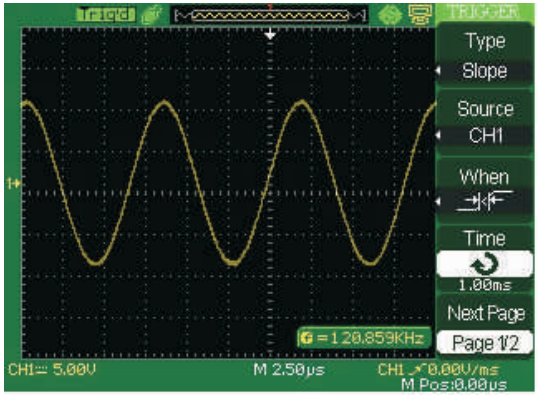

Table 2–21 Slope trigger function menu 2

Option	Setting	Introduction
Type	Slope	Trigger on positive slope of negative slope according to setup time of the oscilloscope.
Vertical		Select the trigger level that can be adjusted by LEVEL knob. You can adjust LEVEL A, LEVEL B or adjust them at the same time.
Mode	Auto	Use this mode to let the acquisition free–run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the SINGLE button.
Set up		Enter the Trigger setup menu(See table 2–14).
Next Page	Page 2/2	Return the first page of slope trigger.

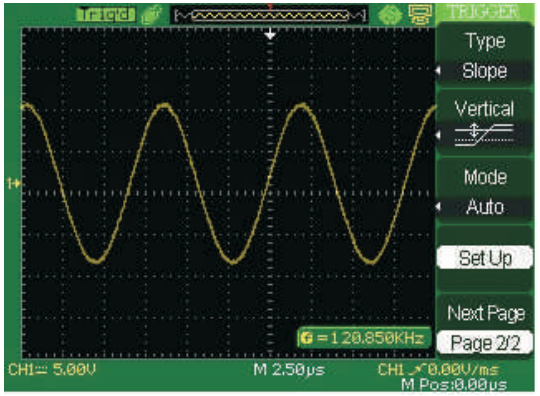

Operate Instruction:

Follow nest steps if you select Slope trigger:

- Input a signal to channel 1 or channel 2.
- Press the AUTO button.
- Press the TRIG MENU button to enter Trigger menu.
- Press the Type option button to select Slope.
- Press the Source option button to select CH1 or Ch2.
- Press the When option button to select , “ ”, “ ”, “ ”, “ ” or “ ” .
- Press the Time button, turn the Universal knob to adjust slope time.
- Press the Next Page Page 1/2 option button to enter the second page of Slope trigger menu.
- Press the Vertical option button to select trigger level that can be adjusted.
- Turn the LEVEL knob.

■ Alternative trigger

The trigger signal comes from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time. You can select different trigger types for two vertical signals, and selected types cover edge, pulse, video and slope trigger. Trigger information of two channel signals display on the bottom right of the screen.

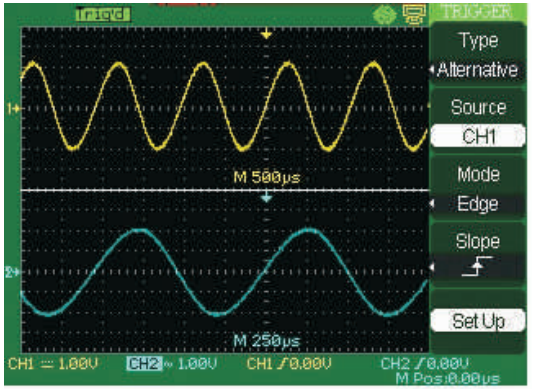

Table 2–22 Set trigger mode to edge trigger function menu 1:

Option	Setting	Introduction
Type	Alternative	The trigger signal comes from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time.
Source	CH1	Set trigger type information for CH1 signal
	CH2	Set trigger type information for CH2 signal
Mode	Edge	Set trigger type of the vertical channel signal to Edge
Slope		Triggering on rising edge.
		Triggering on falling edge.
		Triggering on rising edge and falling edge.
Set up		Enter the Trigger setup menu(See table 2–14).

Table 2–23 Set trigger mode to pulse trigger function menu 1:

Option	Setting	Introduction
Type	Alternative	The trigger signal comes from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time.
Source	CH1	Set trigger type information for CH1 signal
	CH2	Set trigger type information for CH2 signal
Mode		PulseSet trigger type of the vertical channel signal to Pulse trigger.
When		Select how to compare the trigger pulse relative to the value selected in the Set Pulse Width option.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2–24 Set trigger mode to pulse trigger function menu 2:

Option	Setting	Explain
Set Width	20.0ns ~ 10.0s	Selecting this option can turn the universal to set up the pulse width.
Set up		Enter the Trigger Setup Menu (see table 2–14).
Next Page	Page 2/2	Press this button to return the first page.

Table 2–25 Set trigger mode to video trigger function menu1:

Option	Setting	Introduction
Type	Alternative	The trigger signal comes from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time.
Source	CH1	Set trigger type information for CH1 signal
	CH2	Set trigger type information for CH2 signal
Mode	Video	Set trigger type of the vertical channel signal to Video trigger.
Polarity	(Normal)	Normal triggers on the negative edge of the sync pulse.
	(Inverted)	Inverted triggers on the positive edge of the sync pulse.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2–26 Set trigger mode to video trigger function menu 2:

Option	Setting	Introduction
Sync	Line Num All lines Odd field Even Field	Select appropriate video sync.
Standard	NTSC Pal/Secam	Select the video standard for sync and line number count.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2–27 Set trigger mode to slope trigger function menu 1

Option	Setting	Introduction
Type	Alternative	The trigger signal comes from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time.
Source	CH1	Set trigger type information for CH1 signal
	CH2	Set trigger type information for CH2 signal
Mode	Slope	Set trigger type of the vertical channel signal to slope trigger.
When		Select slope trigger condition.
Next Page	Page 1/2	Enter the second page of the alternative trigger.

Table 2–28 Set trigger mode to slope trigger function menu 2

Option	Setting	Introduction
Time	〈Set time〉	Turn the Universal knob to set the slope time. Time setup range is 20ns–10s.
Vertical		Select the trigger level that can be adjusted by LEVEL knob. You can adjust LEVEL A, LEVEL B or adjust them at the same time.
Set up		Enter the Trigger setup menu(see table 2–14).
Next Page	Page 2/2	Return the first page of Alternative trigger menu.

Operate Instruction:

Observe two irrelative channel signals, follow these steps：

- Input two irrelative signals to channel 1 and channel 2.
- Press the AUTO button.
- Press the TRIG MENU button to enter “trigger menu”.
- Press the “Type” option button to select “Alternative”.
- Press the “Source” option button to select “Ch1”.
- Press the “S/div” knob to optimize waveform display.
- Press “Mode” option button to select “ Edge”, “Pulse”, “Slope” o r “Video”.
- Set the trigger according to trigger edge.
- Press the “Source” option button to select “Ch2”.
- Turn the “S/div” knob to optimize waveform display.
- Repeat steps 7 and 8.

2.8.3 Coupling

Use the Coupling to make sure the signal that passes the trigger circuit. It is useful for us to gather a steady wave form.
If you use the trigger coupling, you should press the TRIGGER button and then select edge or Pulse trigger. Then select the coupling option.

2.8.4 Position

The horizontal position control establishes the time between the trigger position and the screen center. You can adjust the horizontal POSITION knob control to view waveform data before the trigger, after the trigger, or some of each. When you change the horizontal position of a waveform, you are changing the time between the trigger and the center of the display actually. (This appears to move the waveform to the right or left on the display.)

2.8.5 Slope & Level

The Slope and Level controls help to define the trigger. The Slope option (Edge trigger type only) determines whether the oscilloscope finds the trigger point on the rising or the falling edge of a signal.
The TRIGGER LEVEL knob controls where on the edge the trigger point occurs.

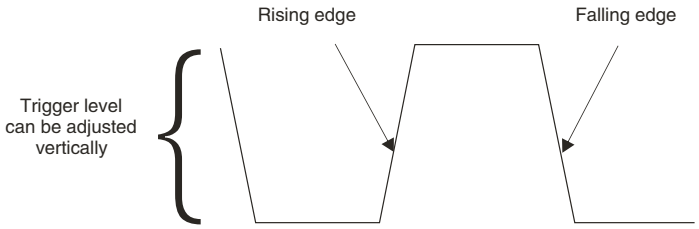

Note

1. Press the SINGLE button when you want the oscilloscope to acquire a single waveform.
2. Trigger coupling affects only the signal passed to the trigger system. It does not affect the bandwidth or coupling of the signal displayed on the screen.
3. Normal Polarity Sync triggers always occur on negative–going horizontal sync pulses. If the video waveform has positive–going horizontal sync pulses, use the Inverted Polarity selection.

2.8.6 Trigger Holdoff

You can use the Trigger Holdoff function to produce a stable display of complex waveforms. Holdoff is time between when the oscilloscope detects one trigger and when it is ready to detect another. The oscilloscope will not trigger during the holdoff time. For a pulse train, you can adjust the holdoff time so the oscilloscope triggers only on the first pulse in the train.

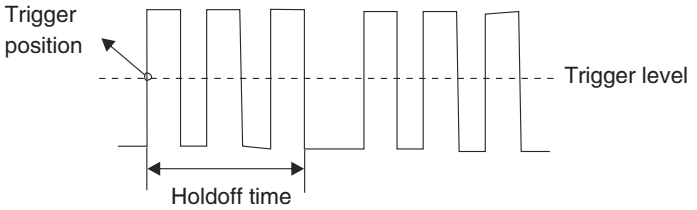

If you want to change holdoff time, please follow next operations:

- Press the TRIG MENU button to show the TRIG Menu.
- Press the Type option button to select trigger type.
- Press the Set up option button to enter the Trigger setup menu.
- Press the Holdoff option button，turn the Universal knob to change the holdoff time until the waveform trigger steadily.

Note

1. Use trigger holdoff to help stabilize the display of aperiodic waveforms.

2.9 Acquiring Signals system

Showing as the follow picture，the ACQUIRE button for Acquiring Signals system is at the menu.

Table 2–29 The Function manual of Acquiring Signals:

Option	Setting	Introduction
Acquisition	Sampling	Use for sampling and accurately display most of the waveform.
	Peak Check	Detect the noise and decrease the possibility of aliasing.
	Average	Use to reduce random or uncorrelated noise in the signal display.
	Averages〔4, 16, 32,64,128,256〕	Select number of averages.
Sinx/x	On	Use sin interpolation
	Off	Use linear interpolation
Mode	Equ time	Set the Sampling mode to Equ time.
	Real time	Set the Sampling mode to Real time.
Sa Rate		Display system sampling rate.

When you acquire a signal, the oscilloscope converts it into a digital form and displays a waveform. The acquisition mode defines how the signal is digitized and the time base setting affects the time span and level of detail in the acquisition.

■ Sampling: In this acquisition mode, the oscilloscope samples the signal in evenly spaced intervals to construct the waveform. This mode accurately represents signals most of the time.

Advantage: You can use this mode to reduce random noise.
Disadvantage: This mode does not acquire rapid variations in the signal that may occur between samples. This can result in aliasing may cause narrow pulses to be missed. In these cases, you should use the Peak Detect mode to acquire data.

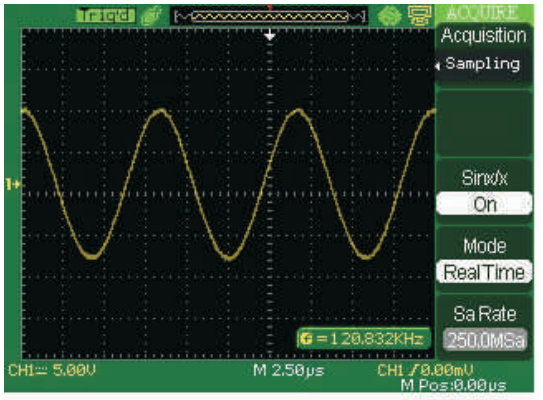

■ Peak Detect: Peak Detect mode capture the maximum and minimum values of a signal Finds highest and lowest record points over many acquisitions.

Advantage: In this way, the oscilloscope can acquire and display narrow pulses, which may have otherwise been missed in Sample mode.
Disadvantage: Noise will appear to be higher in this mode.

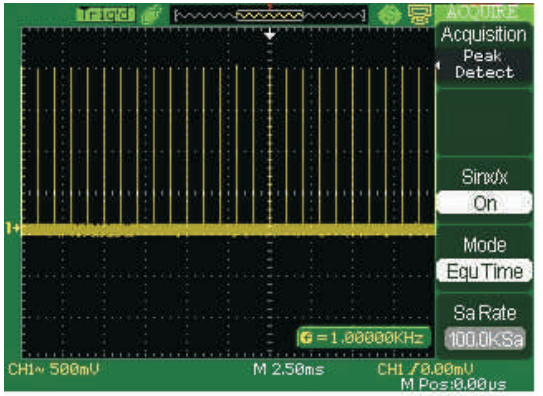

■ Average: The oscilloscope acquires several waveforms, averages them, and displays the resulting waveform.
Advantage: You can use this mode to reduce random noise.

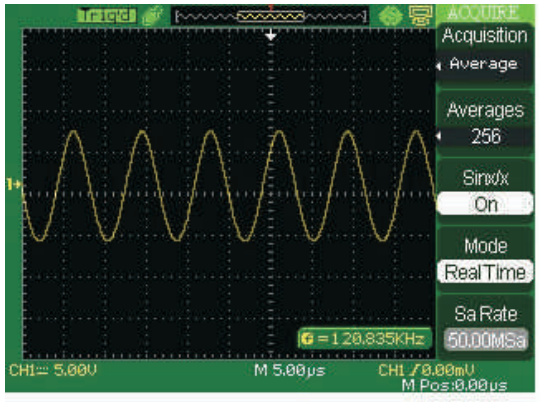

■ Equivalent Time Sampling:
The equivalent time sampling mode can achieve up to 20 ps of horizontal resolution (equivalent to 50GSa/s). This mode is good for observing repetitive waveforms.
■ Real Time Sampling: The scope has the highest Real–time sampling rate up to 500MSa/s.
■ RUN/STOP Button: Press the RUN/STOP button when you want the oscilloscope to acquire waveforms continuously. Press the button again to stop the acquisition.
■ SINGLE Button: Press the SINGLE button to acquire a single waveform. Each time you push the SINGLE button, the oscilloscope begins to acquire another waveform. After the oscilloscope detects a trigger it completes the acquisition and stops.

.
When you push the RUN/STOP or SINGLE buttons to start an acquisition, the oscilloscope goes through the following steps:

- Acquire enough data to fill the portion of the waveform record to the left of the trigger point. This is also called the pre–trigger.
- Continue to acquire data while waiting for the trigger condition to occur.
- Detect the trigger condition.
- Continue to acquire data until the waveform record is full.
- Display the newly–acquired waveform.

■ Base time: The oscilloscope digitizes waveforms by acquiring the value of an input signal at discrete points. The time base allows you to control how often the values are digitized.
To adjust the time base to a horizontal scale that suits your purpose, use the S/div knob.

■ Time Domain Aliasing：
Aliasing occurs when the oscilloscope does not sample the signal fast enough to construct an accurate waveform record. When this happens, the oscilloscope displays a waveform with a frequency lower than the actual input waveform, or triggers and displays an unstable waveform.

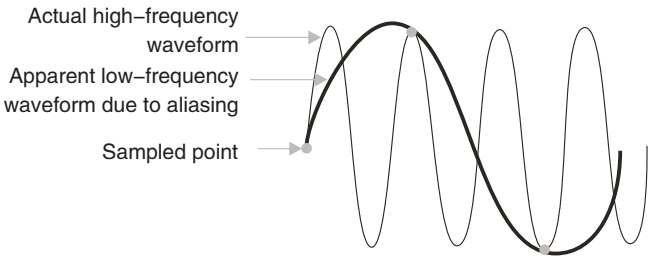

Operate Introduction:

Set up Sampling Format
You can press the Acquisition option button or turn the Universal knob to select Sampling mode, Peak Detect mode or Average mode..

Set up Averages
When you select Average format, you can press the Averages option button to select 4, 16, 32, 64, 128or 256.

Set up function interpolation
Press the Sinx/x option button to select On or Off,show as following pictures.

On is sin interpolation

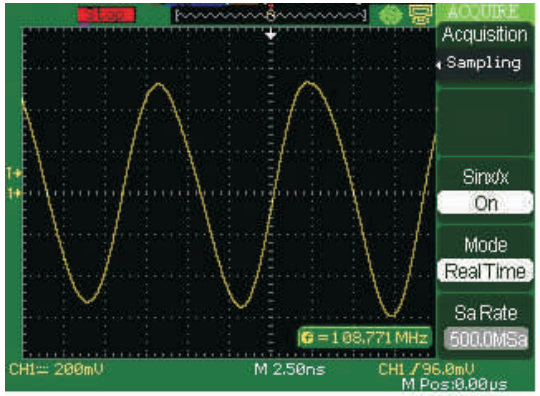

"Off" is linear interpolation.

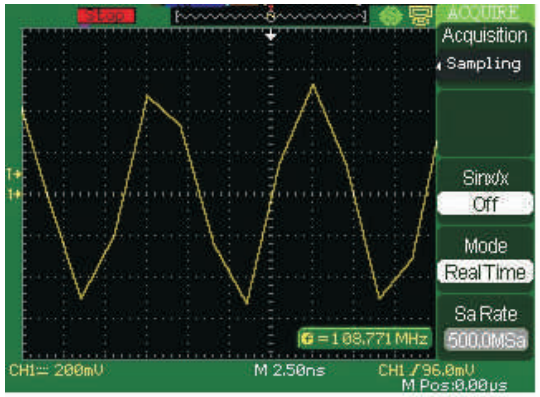

Set up Sampling mode
Press the Mode option button to select Real Time or Equ Time.

Set up Sampling rate
In Real time mode, turn the S/div knob to display the real time sampling rate at corresponding time base scale; In Equ time mode, turn the S/div knob to display the Equ time sampling rate at corresponding time base scale.

2.10 Display System

The display function could be expressed by the DISPLAY Button.

Table 2–30 Display system function menu 1:

Option	Setting	Introduction
Type	Vectors	Vectors fills the space between adjacent sample points in the display.
	Dots	Dots：display sample points Directly.
Persist	Off 1 sec 2 sec 5 sec Infinite	Sets the length of time each displayed sample point remains displayed.
Intensity	<Intensity>	Set waveforms' intersity.
Brightness	<Brightness>	Set grid brightness.
Next Page	Page 1/3	Press this button to enter second page.

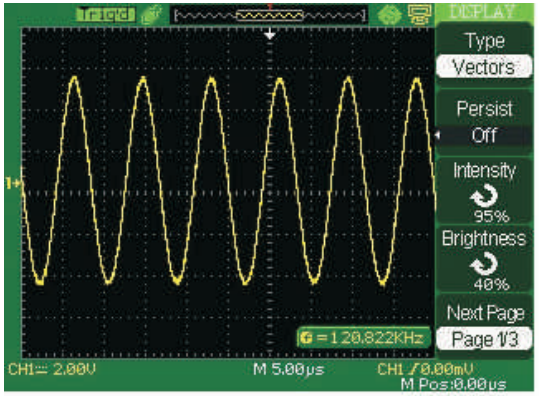

Table 2–31 Display system function menu 2:

Option	Setting	Introduction
Format	YT	YT format displays the vertical voltage in relation to time (horizontal scale).
	XY	XY format displays a dot each time a sample is acquired on channel 1 and channel 2.
Screen	Normal	set to normal mode.
	Inverted	set to invert color display mode.
Grid		Display grids and axes on the screen.
		Turn off the grids.
		Turn off the grids and axes.
Menu Display	2sec 5sec 10sec 20sec Infinite	Set menu display time on screen.
Next Page	Page 2/3	Press this button to enter the sencond page of Display menu.

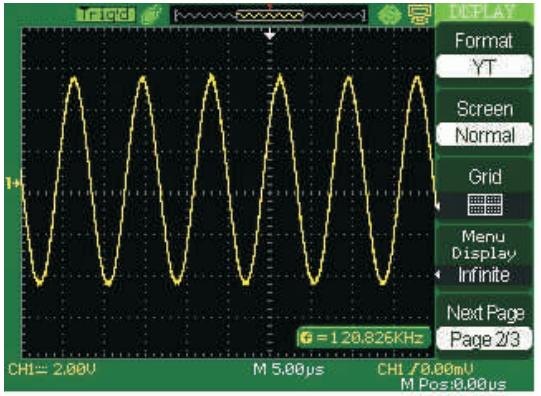

Table 2–32 Display system function menu3:

Option	Setting	Introduction
Skin	Classical Modern Tradition Succinct	Set up screen style.
Next Page	Page 3/3	Press this button to return the first page.

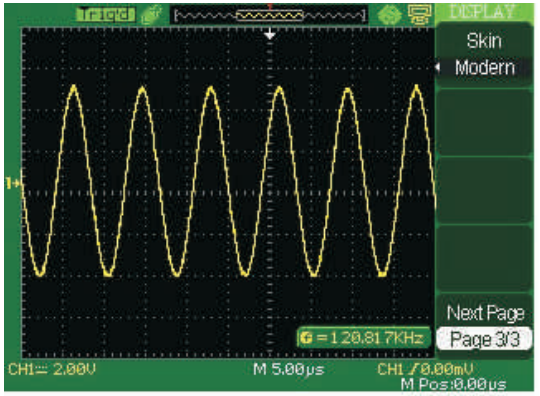

Operate Introduction:

1. Set up waveform display type
- Press the DISPLAY button to enter the Display menu.
- Press the Type option button to select Vectors or Dots.

2. Set up Persist
- Press the Persist option button to select Off, 1 Sec, 2 Sec, 5Sec or Infinite. You can use this option to observe some especial waveforms.

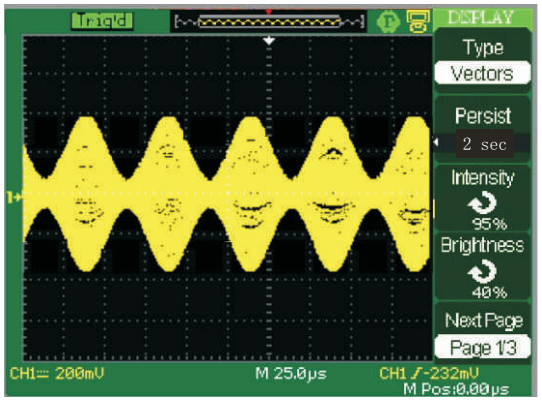

3. Set up Intensity
- Press the Intensity option button and turn the Universal knob to adjust waveforms' intensity.

4. Set up Brightness
- Press the Brightness option button and turn the Universal knob to adjust grid brightness.

4. Set up display format
- Press the Next Page option button to enter second display menu.
- Press the Format option button to select YT or XY.

6. Set up Screen
- Press the Screen option button to select Normal or Inverted to set the screen display color.

7. Set up Grid
- Press the Grid option button to select , or to set the screen whether display grid or not.

8. Set up Menu Display
- Press the Menu Display option button to select 2 sec, 5sec, 10sec, 20sec or Infinite to set menu display time on screen.

9. Set Skin
- Press the skin option button or turn the Universal knob to select Classical, Modern, Traditional or Succinct.

2.10.1 X–Y Format

Use the XY format to analyze phase differences, such as those represented by Lissajous patterns. The format plots the voltage on channel 1 against the voltage on channel 2, where channel 1 is the horizontal axis and channel 2 is the vertical axis. The oscilloscope uses the untriggered Sample acquisition mode and displays data as dots.

XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s， 4Kpts memory depth Series support 5KSa/s ~ 200MSa/s (1–2.5–5 sequence) adjusted. The other series support 25KSa/s ~ 500MSa/s (1–2.5–5 sequence) adjusted

Note

1. The oscilloscope can capture a waveform in normal YT mode at any sampling rate. You can view the same waveform in XY mode. To do so, stop the acquisition and change the display format to XY.

Operation steps：

- Channel 1Volt/divand vertical POSITION set up the horizontal scale] and position.
- Channel 2Volt/divand vertical POSITION set up the horizontal scale and position.
- Turn the S/div knob to adjust the sampling rate
- The following functions are forbidden at XY display form:
- Benchmark wave form and wave mathematic
- Cursor
- Auto（resets display format to Yt）
- Trigger Control
- Horizontal Position Knob
- Vector Display Type
- Scan Display

Note

1. When the display Type is set to Vectors, the oscilloscope connects the sample points by using digital interpolation. Interpolation mode contain linearity interpolation and sin(x)/x interpolation. Sin(x)/x interpolation is suitable for real time mode. It is effective at 250ns/div or at faster time base in real time mode.

2.11 Measure System

The Oscilloscope displays the voltage in relation to time and test the wave form displayed. There are scale, Cursor and auto measure modes.

2.11.1 Scale Measurement

This method allows you to make a quick, visual estimate.
For example, you might look at waveform amplitude and determine that it is a little more than 100 mV. You can take simple measurements by counting the major and minor graticule divisions involved and multiplying by the scale factor. For example, if you counted five major vertical graticule divisions between the minimum and maximum values of a waveform and knew you had a scale factor of 100mV/div, then you could easily calculate your peak–to–peak voltage as follows:

5 divisions x 100 mV/division = 500 mV.

2.11.2 Cursor Measurement

Picture 2–50 displays the cursor button on the front–panel for this menu.

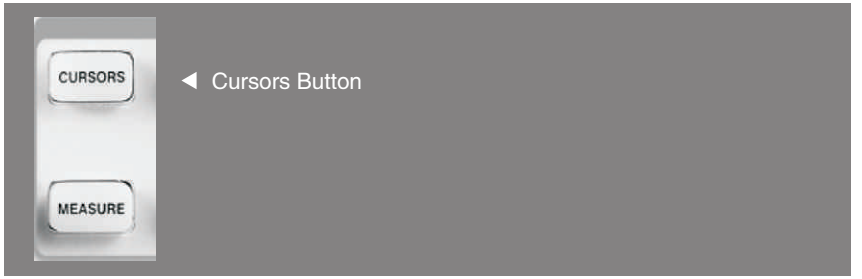

Press the CURSORS button to display the Cursor Menu.
The cursor measurement has three modes: Manual, Track and Auto Measure.

Manual Mode

Table 2–33 Manual cursor function menu:

Option	Setting	Introduction
Cursor Mode	Manual	In this menu, set the manual cursor measure.
Type	Voltage	Use cursor to measure voltage parameters.
	Time	Use cursor to measure time parameters.
Source	Ch1 CH2 MATH REFA REFB	Select input signal channel.
Cur A		Select this option，turn the Universal knob to adjust cursor A.
Cur B		Select this option，turn the Universal knob to adjust cursor B.

In this mode, the screen displays two horizontal parallel cursors or vertical parallel cursors to measure voltage or time. You can move the cursor by turning the Universal knob. Before using cursors, you should make sure that you have set the signal source as the channel for measuring.

- Voltage Cursor: Voltage cursors appear as horizontal lines on the display and measure the vertical parameters.
- Time Cursor: Time cursors appear as vertical lines on the display and measure the horizontal parameters.
- Cursor Moving: Use the universal knob to move cursor1 and cursor2 .They could be moved when the corresponding cursor option are selected, and cursor value will display on the bottom left and top left of the screen when you move the cursor.

To do manual cursor measurements, follow these steps:

- Press CURSOR button to enter the cursor function menu.
- Press the Cursor Mode option button to select Manual.
- Press the Type option button to select Voltage or Time.
- Press the Source option button to select CH1, CH2, MATH, REFA or REFB according to input signal channel.
- Select Cur A, turn the Universal knob to adjust Cursor A.
- Select Cur B, turn the Universal knob to adjust cursor B.
- The measurement values are displayed on the top of the left corner:

If the measurement type is set to Voltage, the values are:
The value of Cur A: CurA
The value of Cur B: Cur B
The voltage increment between Cursor A and Cursor B: △V
If the measurement type is set to Time, the values are:
The value of Cur A: CurA
The value of Cur B: Cur B
The time increment between Cursor A and Cursor B: △T
The reciprocal of time increment between Cursor A and Cursor B: 1/△T

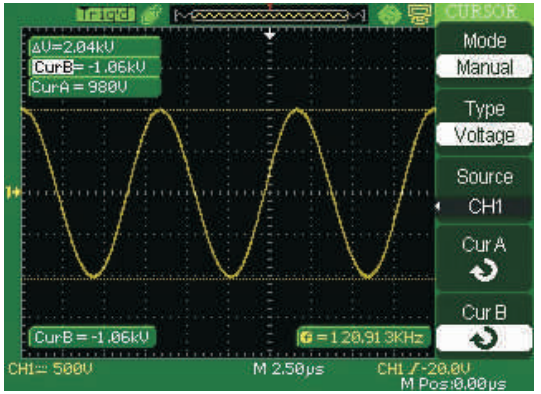

Track mode

Table 2–34 Track mode function menu:

Option	Setting	Introduction
Cursor Mode	Track	In this mode, set track cursor measure.
Cursor A	CH1 CH2 NONE	Set the input signal channel that the Cursor A will measure.
Cursor B	CH1 CH2 NONE	Set the input signal channel that the Cursor B will measure.
Cur A		Select this option, turn the Universal knob to adjust horizontal coordinate of Cursor A.
Cur B		Select this option, turn the Universal knob to adjust horizontal coordinate of Cursor B.

In this mode, the screen displays two cross cursors. The cross cursor sets the position on the waveform automatically. You could adjust cursor's horizontal position on the waveform by turning the Universal knob. The oscilloscope displays the values on the top of the right screen.

To do track cursor measurement, follow these steps:

- Press CURSOR button to enter the cursor measure function menu.
- Press the Cursor Mode option button to select Track.
- Press the Cursor A option button to select the input signal channel.
- Press the Cursor B option button to select the input signal channel.
- Select Cur A, turn the Universal knob to move Cursor A horizontally.
- Select Cur B, turn the Universal knob to move Cursor B horizontally.
- The measurement values are displayed on the left of the top corner:
  A→T: The horizontal position of Cursor A
  (Time cursor centered around the midpoint of screen).
  A→V: The Vertical position of Cursor A
  (Voltage cursor centered around channel ground level).
  B→T: The horizontal position of Cursor B
  (Time cursor centered around the midpoint of screen).
  B→V: The Vertical position of Cursor B
  (Voltage cursor centered around channel ground level).
  △T: Horizontal space between Cursor A and Cursor B
  (Time value between two cursors).
  1/△T: The reciprocal of horizontal space between cursor A and cursor B.
  △V: Vertical space between Cursor A and Cursor B
  (Voltage value between two cursors).

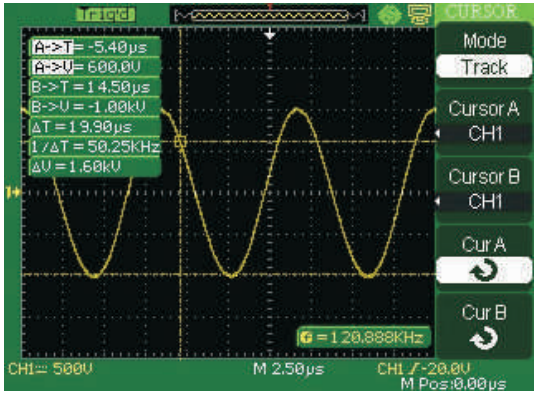

Auto mode

Table 2–35 Auto mode function menu:

Option	Setting	Introduction
Cursor Mode	Auto	Set to auto cursor measure mode.

This mode will take effect with automatic measurements. The instruments will display cursors while measuring parameters automatically. These cursors demonstrate the physical meanings of these measurements.

To do auto cursor measurements, follow these steps:

- Press the CURSOR button to enter Cursor measure menu.
- Press the Cursor Mode option button to select Auto.
- Press the MEASURE button to enter Auto cursor measure mode menu to select the parameter that you want to measure.

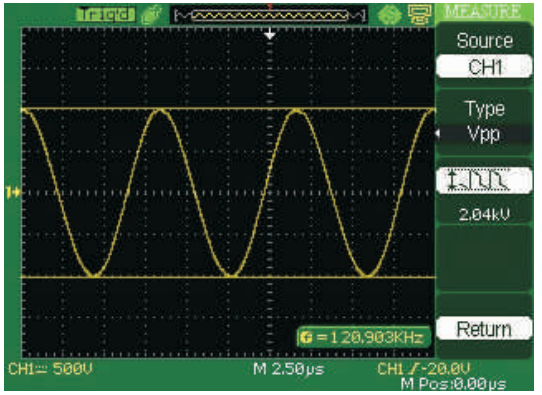

2.11.3 Auto Measurement

MEASURE is Automatic measure function button.

When you take automatic measurements, the oscilloscope does all the calculating for you. Because the measurements use the waveform record points, they are more accurate than the graticule or cursor measurements.

Press the 'MEASURE' for the Automatic Test.
There are three auto measurement types: Voltage Measure, Time Measure and Delay Measure. There are thirty two measure parameters in all and display five parameters on the right of screen at one time

Table 2–36 Auto measure function menu 1:

Option	Introduction
Voltage	Press this button to enter the Voltage measure menu.
Time	Press this button to enter the Time measure menu.
Delay	Press this button to enter the Delay measure menu.
All Mea	Press this button to enter the All Measurement menu.
Return	Press this option button to return the home page of the auto measure menu.

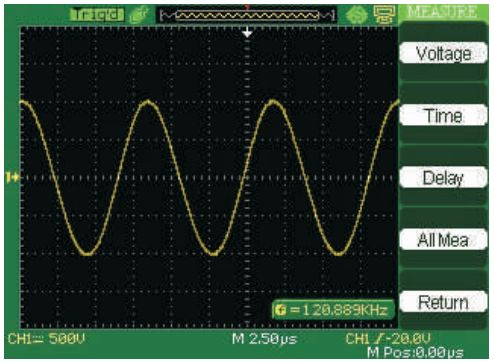

Table 2–37 Auto measure function 2–Voltage measure menu:

Option	Setting	Introduction
Source	CH1、CH2、MATH REFA、REFB	Select input signal source for Voltage measure.
Type	Vmax, Vmin, Vpp, Vamp, Vtop, Vbase, Cycle Mean, Mean, Cycle Vrms, Vrms, ROVShoot, FOVShoot, RPREShoot, FPREShoot	Press the Type button or turn the Universal knob to select Voltage measure parameter.
	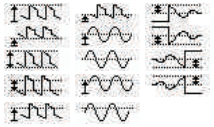	Display the corresponding icon and measure value of your selected Voltage measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2–38 Auto measure function3–Time measure menu:

Option	Setting	Introduction
Source	CH1、CH2、MATH、REFA、REFB	Select input signal source for Time measure.
Type	Rise Time、Fall Time、Freq、Period、BWidth、+Width、–Width、+Duty、–Duty	Press the Type button or turn the Universal knob to select Time measure parameter.
		Display the corresponding icon and measure value of your selected time measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2–39 Auto measure function4–Delay measure menu:

Option	Setting	Introduction
Source	CH1、CH2、MATH、REFA、REFB	Select input signal source for Delay measure.
Type	Phase、FRR、FRF、FFR、FFF、LRR、LRF、LFR、LFF	Press the Type button or turn the Universal knob to select Delay measure parameter.
		Display the corresponding icon and measure value of your selected Delay measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2–40 All Measurement function menu:

Option	Setting	Introduction
Source	CH1 CH2	Select input signal channel.
Voltage	On	Turn on the all measurement function to measure voltage parameters.
	Off	Turn of the all measurement function to measure voltage parameters.
Time	On	Turn on the all measurement function to measure Time parameters.
	Off	Turn of the all measurement function to measure Time parameters.
Delay	On	Turn on the all measurement function to measure Delay parameters.
	Off	Turn of the all measurement function to measure Delay parameters.
Return		Return to the All Measure main menu.

Table 2–41 Introduction of the Measure Type:

Measure Type	Introduction
Vmax	The most positive peak voltage measured over the entire waveform.
Vmin	The most negative peak voltage measured over the entire waveform.
Vpp	Measures the absolute difference between the maximum and minimum peaks of the entire waveform.
Vtop	Measures the highest voltage over the entire waveform.
Vbase	Measures the lowest voltage over the entire waveform.
Vamp	Voltage between Vhig and Vlow of a waveform.
Vavg	The arithmetic mean over the first cycle in the waveform.
Mean	The arithmetic mean over the entire waveform.
Crms	The true Root Mean Square voltage over the first cycle in the waveform.
Vrms	The true Root Mean Square voltage over the entire waveform.
ROVShoot	Defined as (Vmax–Vhig)/Vamp after the waveform rising.
FOVShoot	Defined as (Vmin–Vlow)/Vamp after the waveform falling.
RPREshoot	Defined as (Vmin–Vlow)/Vamp before the waveform rising.
FPREshoot	Defined as (Vmax–Vhig)/Vamp before the waveform falling.
Rise Time	Rise Time Measures the time between 10% and 90% of the first rising edge of the waveform.
Fall Time	Fall Time Measures the time between 90% and 10% of the first falling edge of the waveform.
BWid	The duration of a burst Measured over the entire waveform.
+ Wid	+ Width Measures the time between the first rising edge and the next falling edge at the waveform 50% level.
– Wid	–Width Measures the time between the first falling edge and the next rising edge at the waveform 50% level.
+ Duty	Measures the first cycle waveform.Positive Duty Cycle is the ratio between positive pulse width and period.
– Duty	Measures the first cycle waveform.Negative Duty Cycle is the ratio between negative pulse width and period.
Phase	The amount one waveform leads or lags another in time. Expressed in degrees, where 360 degrees comprise one waveform cycle.
FRR	The time between the first rising edge of source 1 and the first rising edge of source 2.
FRF	The time between the first rising edge of source 1 and the first falling edge of source 2.

Measure Type	Introduction
FFR	The time between the first falling edge of source 1 and the first rising edge of source 2.
FFF	The time between the first falling edge of source 1 and the first falling edge of source 2.
LRR	The time between the first rising edge of source 1 and the last rising edge of source 2.
LRF	The time between the first rising edge of source 1 and the last falling edge of source 2.
LFR	The time between the first falling edge of source 1 and the last rising edge of source 2.
LFF	The time between the first falling edge of source 1 and the last falling edge of source 2.

If you want to measure voltage parameters, please follow next steps:

- Press the MEASURE button to enter the Auto measurement menu.
- Press the top first option button to enter the second measurement menu.
- Select measure type. If you press the Voltage option button, Voltage measurement menu will display on the screen.
- Press the Source option button to select CH1 or CH2 according to input signal channel.
- Press the Type option button to select the parameter type that you want to measure. The corresponding icon and value will display below the measure parameter.

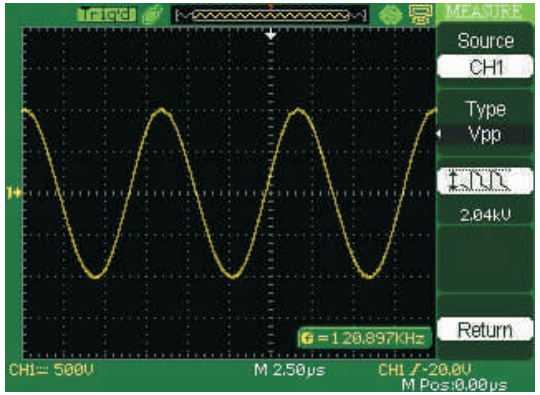

- Press the Return option button to return the home page of Auto Measurement menu. The selected parameter and the corresponding value will display on the top first position of the home page.

You can display the other parameters and its' value on the corresponding position using the same way, and the screen can display five parameters at one time.

If you want to measure time parameters using all measure function, please follow next steps:

- Press the MEASURE button to enter the Auto Measure menu.
- Press the top option button to enter the second page of Auto Measure menu.
- Press All Mea option button to enter the All Measure menu.
- Press Source option button to select input signal channel.
- Press the Time option button to select On. Now all of time parameters value will display on the screen at the same time. (See Picture 2–59)

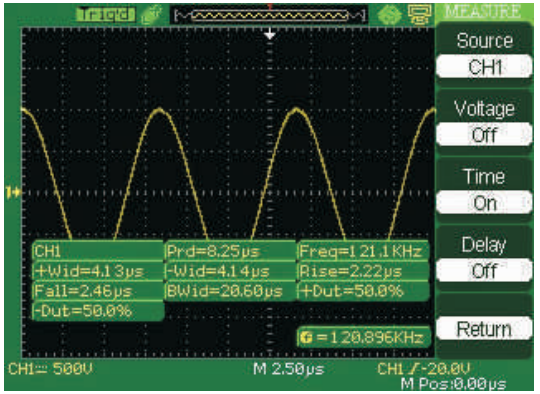

2.12 Storage System

Showing as following picture, The SAVE/RECALL is the Storage System Functional Button.

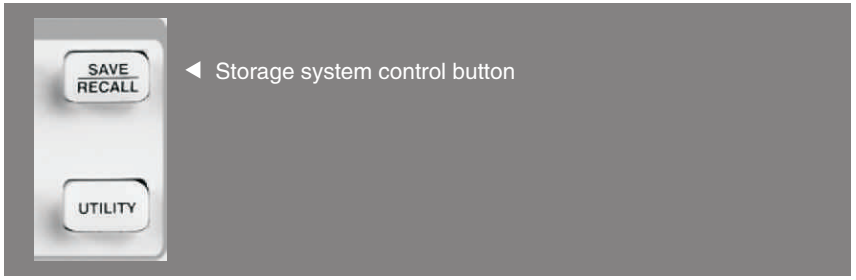

The scope can save 2 groups' reference waveforms, 20 groups' setups and 20 groups' waveforms to the oscilloscope's internal memorizer. There is a USB Host interface in the front panel of the oscilloscope and you can save setup data, waveform data, waveform interface image, CSV file to a USB flash drive furthest at a time. Setup data and waveform data can be recalled to the current oscilloscope or the other same model oscilloscopes. Picture data and CSV file can't be recalled to the oscilloscope, but it can be opened on the correlative computer software.

SAVE/RECALL SETUP

Save/recall interface

Show as following pictures

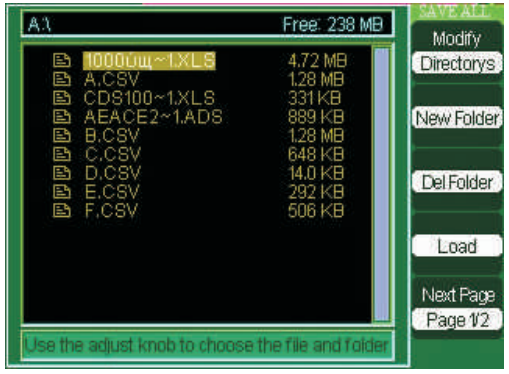

◀ Select operating object

◀ Create new needed folder

◀ Delete present folder

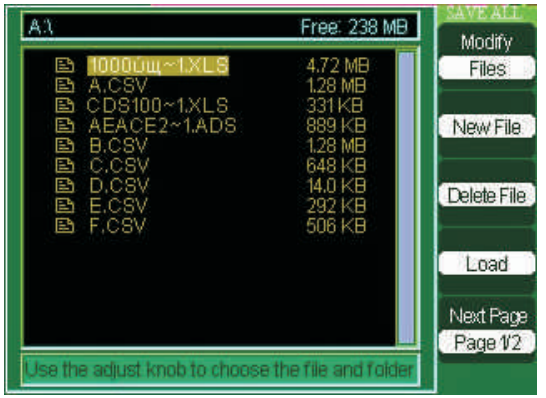

◀ Select operating object

◀ Create new files in present directorys

◀ Delete present file

◀ Recall stored files or present settings

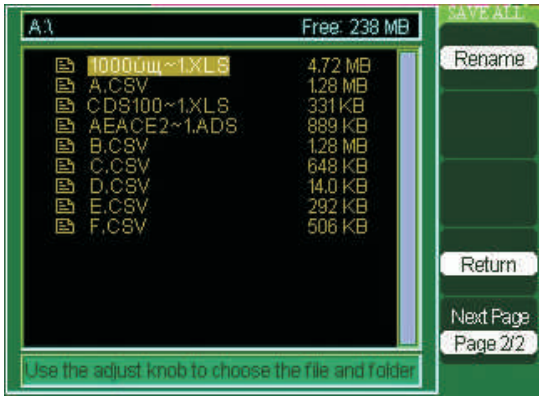

◀ Modify the file name

◀ Return to the last menu

In this module,Setting stores to File,Waveform stores to File,storing pictures and CSV stores to USB flash drive all have this function.Users can modify the name of the file or the directorys , then store the files.

■ Save Setups to Device： The complete setup is stored in nonvolatile memory. When you recall the setup, the oscilloscope will be in the mode from which the setup was saved.

The oscilloscope saves the current setup if you wait three seconds after the last change before you power off the oscilloscope. The oscilloscope recalls this setup the next time you apply power.

Table 2–42 Save setup to device function menu:		
Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall setting in the oscilloscope
Save to	Device	Save setup to the oscilloscope's internal memorizer.
Setup	No.1 to No.20	Press the Setup option button or turn the universal knob to select storage position.
Save		Accomplish the storage
Recall		Recall the storage in the Setup operation

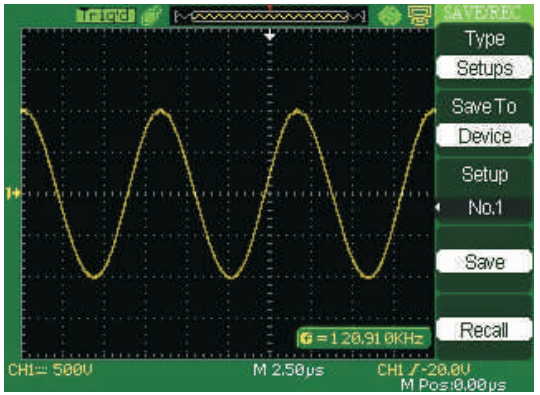

Save setups to the oscilloscope's internal memorizer or recall saved setups from it .Follow these steps:

For example: Save setup that the oscilloscope displays waveform as the form of Dots to the oscilloscope's internal memorizer.

- Press the SAVE/RECALL button to enter the SAVE/RECALL menu.
- Press the Type option button to select setups.
- Press the Save to option button to select Device.
- Press the Setup option button to select No.1.
- Press the DISPLAY button to enter the Display menu.
- Press the Type option button to select Dots.
- Press the SAVE/RECALL button to enter the SAVE/RECALL menu.
- Press the Save option button.

If the display type has been changed, you want to recall this setup. Follow these steps:

- Press the SAVE/RECALL button to enter the SAVE/RECALL display menu.
- Press the Type option button to select Setups.
- Press the Save to option button to select Device.
- Press the Setup option button or turn the Universal knob to select No.1.
- Press the Recall option button.

■ Save Setup to USB flash drive

Table 2–43 Save setup to USB flash drive function menu:		
Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall settings.
Save to	File	Save setup data to USB flash drive.
Save		Go to the Save/Recall interface

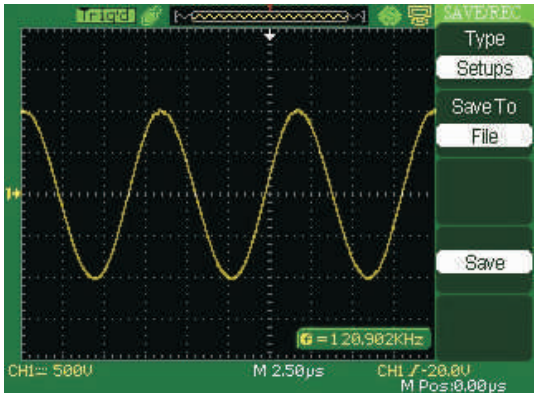

Save setup to USB flash drive, follow these steps：
For example: Save setup that the oscilloscope displays waveform as the form of Dots to the oscilloscope's internal memorizer.

- Press the SAVE/RECALL button to select Setups.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select file.
- Press the Save option button then you'll go into the Save/Recall interface.
- Press the New folder button to creat a new folder
- Press the Del folder option button to delete a folder
- Press the Modify option button to modify a folder.
- Press the New file option button to creat a new file
- Press the Del file option button to delete a file
- Press the next page option button and press the Rename option button to modify the name of the file or the folder.
- Press the Confirmoption button and you save the set to the USB drive.

Recall setup data from USB flash drive, follow these steps:

- Press the SAVE/RECALL button.
- Press the Type button to select Setups.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select File.
- Press the Save option button then you'll go into the Save/Recall interface .
- Choose the file you want then press the Load option button (about five seconds, there is a prompting message that Read data success), now setup data have been recalled from USB flash drive.

■ RECALL FACTORY

You can use this option to recall the factory setup.

Table 2–44 Factory function menu:

Option	Setting	Introduction
Type	Factory	To view the Factory setup.
	Load	Recall the Factory setup.

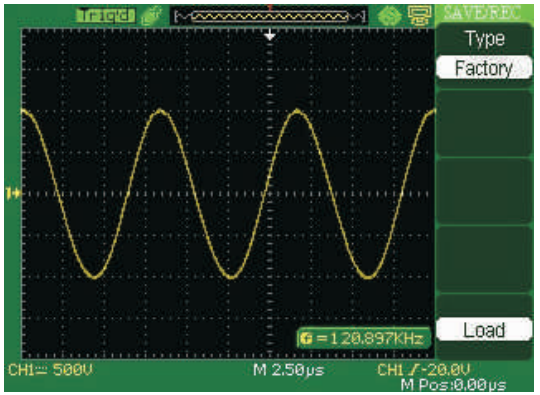

SAVE/RECALL WAVEFORM

■ SAVE/RECALL CAPTURED WAVEFORM： The oscilloscope must display any waveform that you want to save. The oscilloscopes can store twenty captured waveforms in nonvolatile memory.

■ Save waveforms to Device

Table 2–45 Save waveform to device function menu:

Option	Setting	Introduction
Type	waveforms	Menu for the Storage/Recall waveforms in the oscilloscope.
Save to	Device	Save waveforms to the oscilloscope's internal memorizer.
waveform	No.1 to No.20	Press the waveform option button or turn the Universal knob to select storage position.
Save		Accomplish the storage.
Recall		Recall the storage in the waveform operation

Save setup to USB flash drive, follow these steps：

For example: Save setup that the oscilloscope displays waveform as the form of Dots to the oscilloscope's internal memorizer.

- Press the SAVE/RECALL button to select Setups.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select file.
- Press the Save option button then you'll go into the Save/Recall interface.
- Press the New folder button to creat a new folder
- Press the Del folder option button to delete a folder
- Press the Modify option button to modify a folder.
- Press the New file option button to creat a new file
- Press the Del file option button to delete a file
- Press the next page option button and press the Rename option button to modify the name of the file or the folder.
- Press the Confirmoption button and you save the set to the USB drive.

Recall setup data from USB flash drive, follow these steps:

- Press the SAVE/RECALL button.
- Press the Type button to select Setups.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select File.
- Press the Save option button then you'll go into the Save/Recall interface .
- Choose the file you want then press the Load option button (about five seconds, there is a prompting message that Read data success), now setup data have been recalled from USB flash drive.

■ RECALL FACTORY

You can use this option to recall the factory setup.

Table 2–46 Factory function menu:

Option	Setting	Introduction
Type	Factory	To view the Factory setup.
	Load	Recall the Factory setup.

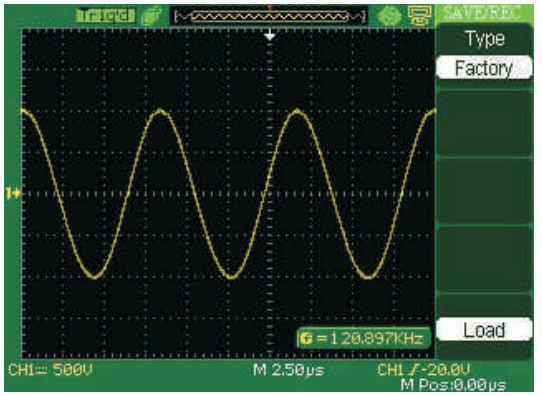

SAVE/RECALL WAVEFORM

■ SAVE/RECALL CAPTURED WAVEFORM： The oscilloscope must display any waveform that you want to save. The oscilloscopes can store twenty captured waveforms in nonvolatile memory.

■ Save waveforms to Device

Table 2–47 Save waveform to device function menu:

Option	Setup	Introduction
Type	waveforms	Menu for the Storage/Recall waveforms in the oscilloscope.
Save to	Device	Save waveforms to the oscilloscope's internal memorizer.
waveform	No.1 to No.20	Press the waveform option button or turn he Universal knob to select storage position.
Save		Accomplish the storage.
Recall		Recall the storage in the waveform operation

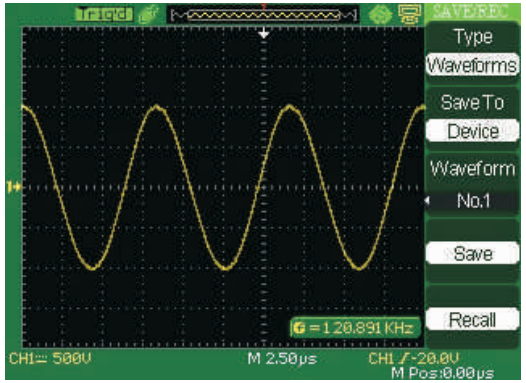

Save waveforms to the oscilloscope's internal memorizer, follow these steps:

- Input a sine signal to channel 1 and press the Auto button.
- Press the SAVE/RECALL button to enter SAVE/RECALL display menu.
- Press the Type option button to select waveforms.
- Press the Save to option button to select Device.
- Press the waveform option button or turn the Universal knob to select No.1.
- Turn the Volts/div knob or S/div knob to adjust the waveform that you want to need.
- Press the Save option button.

Recall the saved waveform from the oscilloscope's internal memorizer, follow these steps:

- Press the SAVE/RECALL button to enter SAVE/RECALL display menu.
- Press the Type option button to select waveforms.
- Press the Save to option button to select Device.
- Press the waveform option button or turn the Universal knob to select No.1.
- Press the Recall option button.

■ Save waveforms to USB flash drive

Table 2–48 Save waveforms to USB flash drive function menu：

Option	Setup	Introduction
Type	Waveforms	Menu for the Storage/Recall waveforms.
Save to	File	Save waveforms to USB flash drive.
Save		Accomplish the storage.

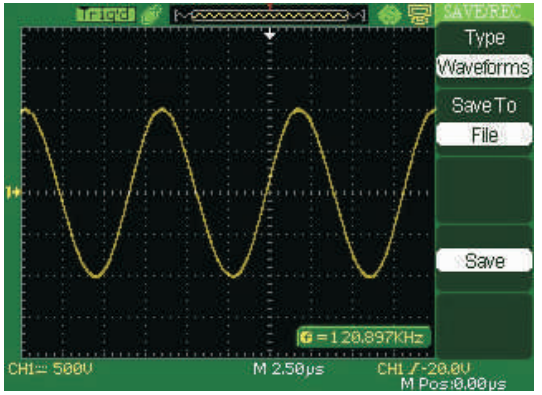

Save waveforms to USB flash drive, follow these steps:

- Input a sine signal to channel 1, press the AUTO button.
- Press the SAVE/RECALL button to enter the SAVE/RECALL display menu.
- Press the Type option button to select Waveforms.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select File.
- Press the Save option button then you'll go into the Save/Recall interface.
- Create a file then press the Confirmbutton(about ten seconds, there is a prompting message that Save data success displaying on the screen), now waveform data have been saved to USB flash drive.

Recall saved waveform data form USB flash drive, follow these steps:

- Press the SAVE/RECALL button.
- Press the Type button to select Waveforms.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Save to option button to select File.
- Press the Save option button then go into the Save/Recall interface.
- Choose the file you want then press the Load option button (about five seconds, there is a prompting message that Recall data success displaying on the screen), now waveform data have been recalled from USB flash drive.

■ Save Picture

Waveform interface image can be saved to USB flash drive, but they can't be recalled. You can open them on correlative computer software.

Table 2–49 Picture storage function menu:

Option	Setting	Introduction
Type	Pictures	Menu for the Storage/Recall waveform interface image.
Print Key	Print Picture	When the oscilloscope connect to the printer and Back USB option is set to Printer, select Print Picture and press the PRINT button to print the screen image.
	Save Picture	When the USB flash drive insert to the USB Host interface(now the USB flash drive open status icon displays on the top of the screen), select Save picture and press the Save knob to go into the Save/Recall interface.
Save		Go to the Save/Recall interface.

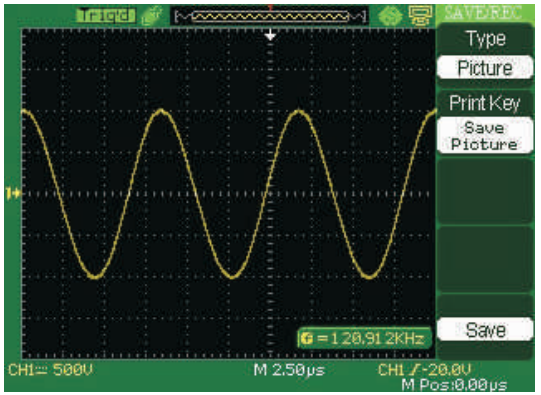

Save waveform interface image to USB flash drive, follow these steps:

- Select the screen image that you want .
- Press the SAVE/RECALL button to enter SAVE/RECALL menu.
- Press the Type option button to select Pictures.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- Press the Print Key option button to select Save Picture.
- Press the Save option button then go into the Save/Recall interface.
- Press the Save buton then you'll go into the Save/Recall interface
- Create the picture name then press the Confirm button(about five seconds, there is a prompting message that Save data success displaying on the screen), now picture data have been saved to USB flash drive.

■ SAVE/RECALL REFERENCE WAVEFORM:

The oscilloscopes can store two reference waveforms in nonvolatile memory. The oscilloscope can display reference waveforms at a time.

Reference waveforms are not adjustable, but the oscilloscope does display the horizontal and vertical scales at the bottom of the screen.(Refer to 2.6.4)

Save/Recall CSV

Table 2–50 CSV storage function menu:

Option	Setting	Introduction
Type	CSV	Menu for the Storage CSV file to USB flash drive.
Data Depth	Displayed	Set to store displayed waveform data to CSV file.
	Maximum	Set to store maximum waveform data to CSV file.
Para Save	On/Off	Set whether store parameters to CSV file or not.
Save		Go to the Save/Recall interface.

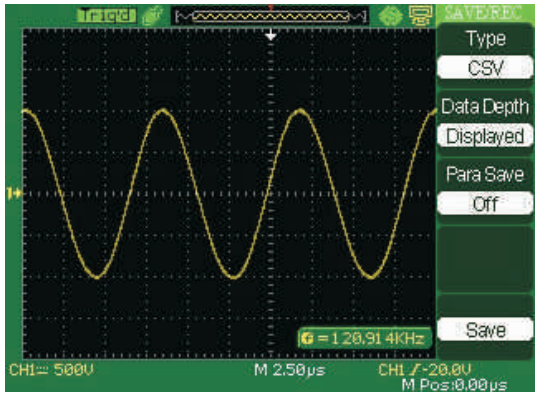

Save CSV file to USB flash drive, follow these steps:

- Press the SAVE/RECALL button to enter SAVE/RECALL menu.
- Press the Type option button to select CSV.
- Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive(about ten seconds).
- Press the Data Depth option button to select Displayed or Maximum.
- Press the Para Save option button to select On or Off.
- Press the Save option button then you'll go into the Save/Recall interface
- Create a file name then press the Confirm button (About five seconds, there is a prompting message that Save data success displaying on the screen), now CSV file has been saved to USB flash drive.

2.13 Utility System

UTILITY: The Utility System Button.

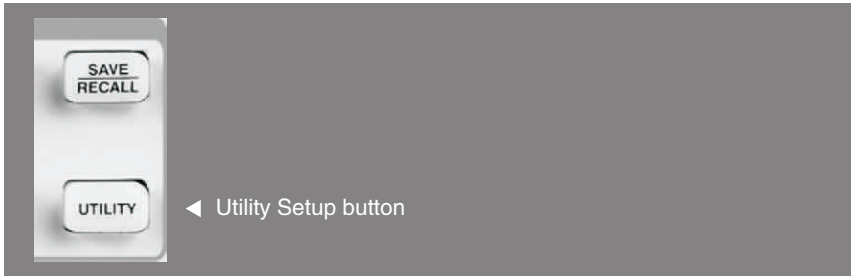

Table 2–51 Utility System function menu 1:

Option	Setting	Introduction
System Status		Displays summaries of the oscilloscope settings.
Sound		Open the key–press voice.
		Close the key–press voice.
Counter	On	Turn on Frequency Counter
	Off	Turn off Frequency Counter.
Language	Simplified Chinese Traditional Chinese English,Arabic,French, German,Russian, Spanish,Portuguese Japanese,Korean,Italian	Select interface language.
Next Page	Page 1/4	Press this button to enter second page.

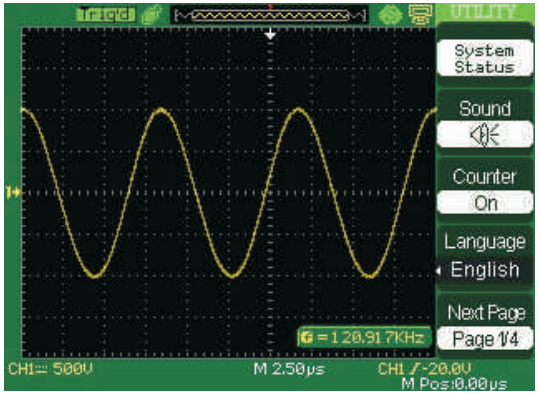

Table 2–52 Utility System function menu 2:

Option	Setting	Introduction
Do self cal		Auto self emendation.
Do Self Test	Screen Test	Run the screen detect program
	Keyboard Test	Run the keyboard detect program
	LED Test	Run the dot lighten detect program.
Print Setup		Enter the print setup menu to set print options.
Back USB	Printer	The oscilloscope connects to the printer using USB cable. When you execute print function, please select Printer. Now the print icon displays on the top of the screen.
	Computer	The oscilloscope connects to the computer using USB cable. When you execute EasyScope software, please select Computer. Now the computer icon displays on the screen.
Next Page	Page 2/4	Press this button to enter third page.

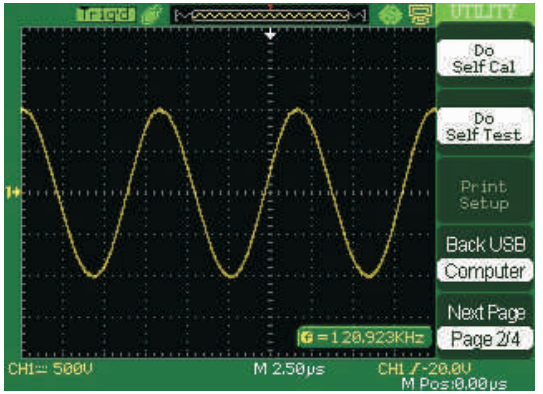

Table 2–53 Functional Menu of the Utility System 3:

Option	Setting	Introduction
Update firmware		You can update the oscilloscope use USB flash Driver (About need two minutes).
Pass/Fail		Press this button to enter the Pass/Fail menu.
Record		Press this button to enter the waveform record menu.
IO Setting		Press this button to enter the IO Setting menu(See table 2–52).
Next Page	Page 3/4	Press this button to enter first page.

Table 2–54 IO Setting function menu:

Option	Setting	Introduction
Baud	300,2400, 4800,9600, 19200,38400	Set up band rate.

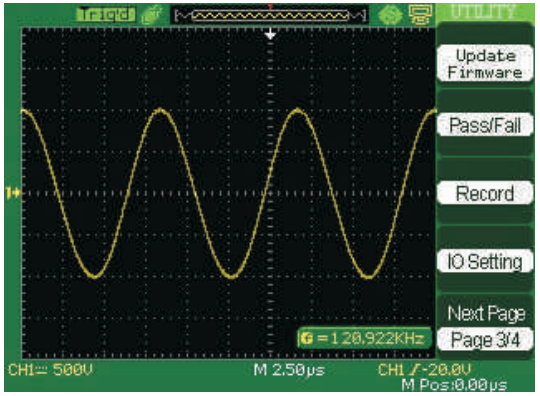

Table 2–55 Functional Menu of the Utility System 4：

Option	Setting	Introduction
Quick–Cal	On	Do Quick–Cal operation
	Off	End up Quick–Cal operation
Screen–saver	1min,2min,5min 10min,15min 30min,1hour 2hour,5hour,Off	Set the time of Screen–saver

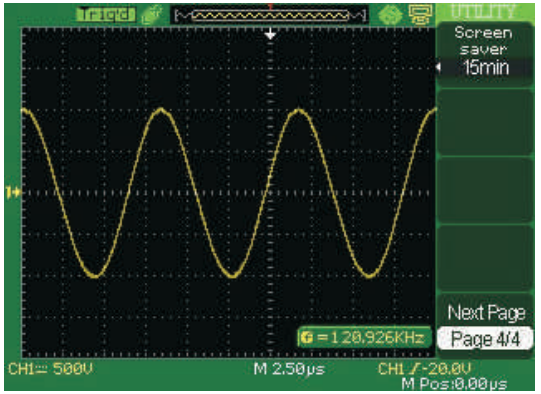

2.13.1 System status

Selecting System Status from the Utility Menu to display a series of information about this oscilloscope

Table 2–56 System status instruction:

Option	Introduction
Startup Times	List the boot–strap times.
Software version	List the software version.
Hardware Version	List the hardware version.
Product type	List the product type.
Serial No.	List the product serial number.

2.13.2 Language

The oscilloscopes have twelve languages' user menu to be selected.
Press the “Utility” button → “language” to select language.

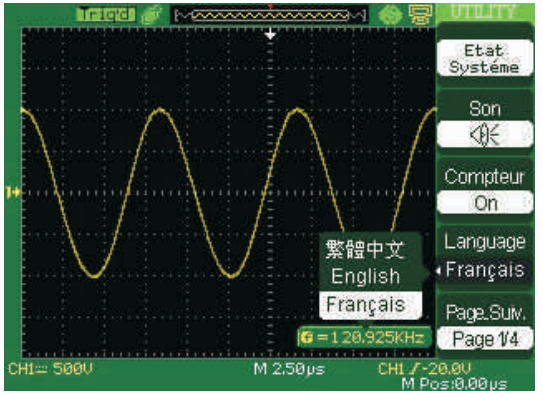

2.13.3 Print

The oscilloscopes support PictBridge compatible printers. You can connect the back USB port of the oscilloscope to the USB port of the PictBridge compatible printer using the USB cable.

Table 2–57 Print setup option function menu 1:

Option	Setting	Introduction
Ink Saver	On	Prints the screen image on a white background when you select on.
	Off	Print the color screen image when you select off.
Layout	Portrait Landscape	Printer output orientation.
Paper Size	Default, L, 2L, Hagaki Postcard, Card Size, 10 x 15 cm, 4" x 6", 8" x 10", Letter, 11" x 17", A0~ A9, B0~ B9, 89 mm, Roll (L), 127 mm Roll (2L), 100 mm Roll (4"), 210 mm Roll(A4)	Displays Settings available on your PictBridge compatible printer.
Print Key	Print Key Print Picture	Select Print Picture option when the oscilloscope connects to the printer, press the S/div knob to print the picture.Select Save Picture option when you insert the USB flash, press the S/div knob to save the picture.
Next Page	Page 1/2	Press this option button to enter next page menu.

Table 2–58 Print setup option function menu 2:

Option	Setting	Introduction
Image Size	Default, 2.5x3.25 in, L (3.5x5 in), 4x6 in, 2L (5x7 in), 8x10 in, 4L (7 x 10 in), E, Card, Hagaki card, 6 x 8 cm, 7x10 cm, 9x13 cm, 10x15 cm, 13x18 cm, 15x21 cm, 18x24 cm, A4, Letter	Displays Settings available on your PictBridge compatible printer.
Paper Type	Default, plain, Photo, Fast Photo	
Print Quality	Default, Normal, Draft, Fine	
ID Print	Default, On, Off	
Next Page	Page 2/2	Press this button to enter first page of print setup menu.

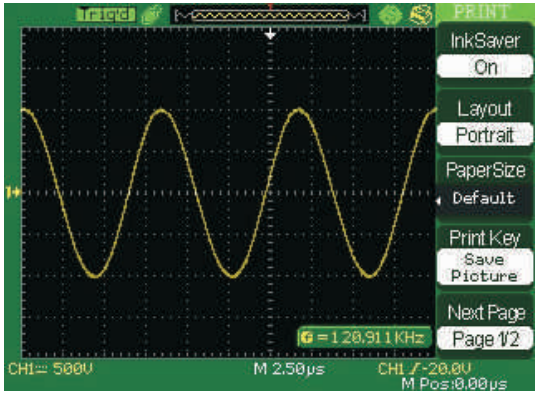

Note

1. The Printer may override your selection for best fit.
2. If your selection is not supported by the printer, the oscilloscope uses the Default setting.
3. The oscilloscope was designed to print to any PictBridge compatible printer. Refer to product documentation for your printer to determine if the printer is compatible with PictBridge.

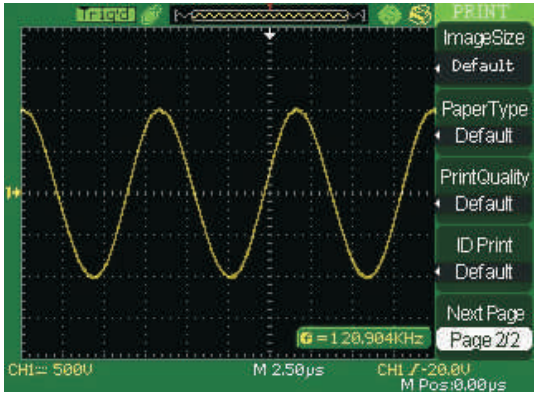

To print screen picture, follow these steps:

1. Connect the oscilloscope to a PictBridge compatible printer.

- Insert one end of a USB cable into the USB Device port on the oscilloscope.
- Insert the other end of the cable into the PictBridge port on a PictBridge compatible printer.

2. Print a Screen image

- Power on the oscilloscope and the printer (The printer recognizes the oscilloscope only when the printer is powered on).
- Press the UTILITY button to display UTILITY menu.
- Press the Next Page option button.
- Press the Back USB option button to select Printer
- Press the Print Setup option button to display Print setup menu.
- Set up the print setup option according to your need. The oscilloscope queries the printer, and only displays options and values that the printer supports.If you are not sure which setting to choose, select Default for each option.
- Press the Print Key option button to select Print Picture.
- Press the PRINT button to print screen image.

The oscilloscope takes a few seconds to capture the screen image. The settings of your printer and print speed determine how long it takes to print the data. Additional time may be required according to the format selected.

Note

1. Before connecting the oscilloscope to the printer, you must be sure that Back USB option having been settled to Printer.
2. If you want to use oscilloscope connecting to your Computer, youmust be sure that " Back USB" option having been setted to "Computer"
3. You can use the oscilloscope while the printer is using.
4. If printing fails, check wthether the USB cable is connected to the PictBridge port on the printer or not. If the connection is OK, but the printing is still failing, you can turn on and off the printer or oscilloscope again, before you turn on and off the printer or oscilloscope again , you must first disconnect the connection between USB cable and USB Host port of the Printer or USB Device port of the oscilloscope, then try again.
5. The RS−232 cable usually has needle shape(male) on one side, while hole shape(female) on the other side.

2.13.4 Self Calibration

Self Calibration procedure can optimize the signal path at the most measurement precision..You can run this procedure at any time. If the operating temperature changes by more than 5 C or the units run less than thirty minutes,you should do the self calibration.

When you run the self Calibration, you should cut off all the probes and lead. Then press the Utility button to choose the Do self cal to show the self Calibration Menu, and execute self calibration program according to the prompting on the screen.

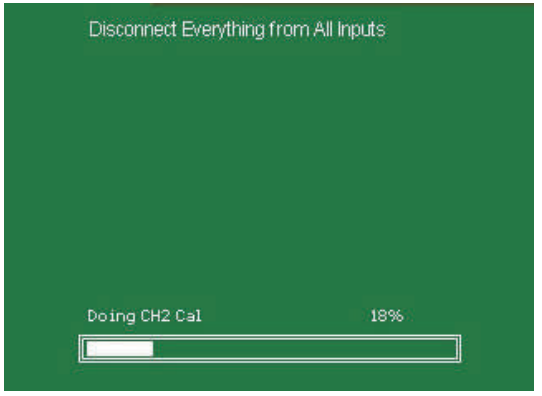

2.13.5 Self Test

Press UTILITY→ Do Self Test

Table 2–59 All Measurement function menu:

Option	Introduction
Screen Test	Run Screen Test Program.
Keyboard Test	Run Keyboard Test Program.
LED Test	Run LED Test Program.

Operation Steps:

1. Screen Test
   Select “Screen Test” to enter the screen test interface. The clew words “Press 'SINGLE' Key to continue，Press 'RUN/STOP' Key to exit” is displayed, you could press the “Single” for test.

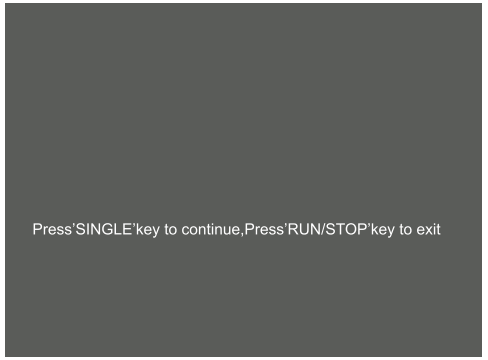

2. Keyboard Test
   Select keyboard Test to enter the key test interface, the on–screen lathy rectangle shapes represent the front panel keys. The shapes with two arrows beside them represent the front panel knobs. The squares represent the knob presses for scale knobs. Test all keys and knobs and you should also verify that all the backlit buttons illuminate correctly.

Note

1. When you operate, the screen would display the white (Color LCD) and black (single LCD) repose.
2. The tested button or knobs corresponding area would display green (Color LCD) or white (single LCD).
3. At the bottom of the screen display Press' RUN/STOP' Key Three Times to exit information prompt to show that press RUN/STOP three times for quiting the test.

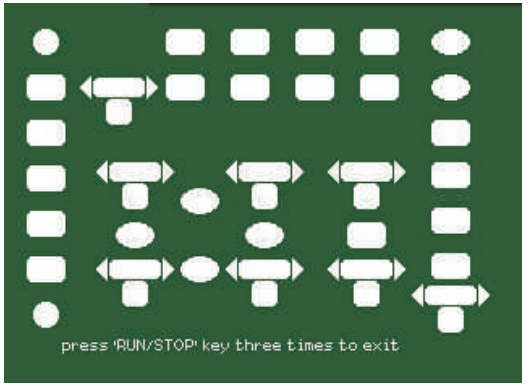

3. LED test
   Select LED Test to enter the lighten interface, the on–screen lathy rectangle shapes represent the front panel keys; the lathy rectangle shapes represent the front panel knobs. The squares represent the knob presses for scale knobs. The clew words Press 'SINGLE' Key to continue , Press 'RUN/STOP' Key to exit is displayed, you could press the Single button continuously for testing, when buttons are lighted ,the corresponding area on the screen would display green(Color LCD) or white(Single LCD).

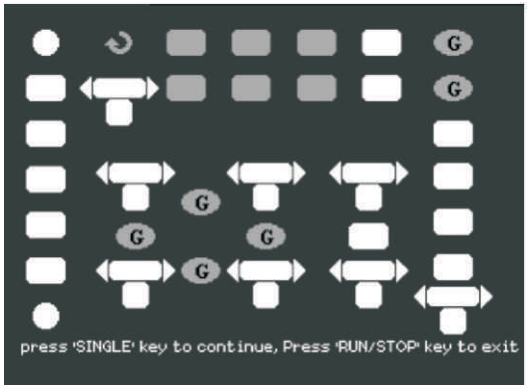

2.13.6 Update Firmware

The software of the oscilloscope can be updated directly via USB Flash drive, this process needs about two minutes. Follow next steps:

- Insert USB Flash Drive with firmware procedure to USB Host interface on the front panel of the oscilloscope.
- Press the UTILITY button to enter the Utility menu.
- Press Next Page option button to enter the third page of Utility menu.
- Press the Update Firmware option button.
- Press the SINGLE button to start updating the software according to prompt on the screen.

Turn off the oscilloscope and turn on it again, the software has been updated. The oscilloscope needs to execute Do Self Cal after update.

> **Note**
> 1. Don't cut off the power while oscilloscope is updating.

2.13.7 Pass/Fail

The Pass/Fail function can monitor changes of signals and output pass or fail signals by judging the input signal is within the predefined mask or not.

Table 2–60 Pass/Fail function menu 1:

Option	Setting	Introduction
Enable	On	Turn on Pass/Fail function.
	Off	Turn off Pass/Fail function.
Source	CH1	Select Pass/Fail test on CH1.
	CH2	Select Pass/Fail test on CH2.
Operate	▶	Press to run the Pass/Fail test.
	■	Press to stop the Pass/Fail test.
Msg Display	On	Turn on times information display of the waveform pass/fail.
	Off	Turn off times information display of the waveform pass/fail.
Next Page	Page 1/2	Press this button to enter second page of Pass/Fail menu.

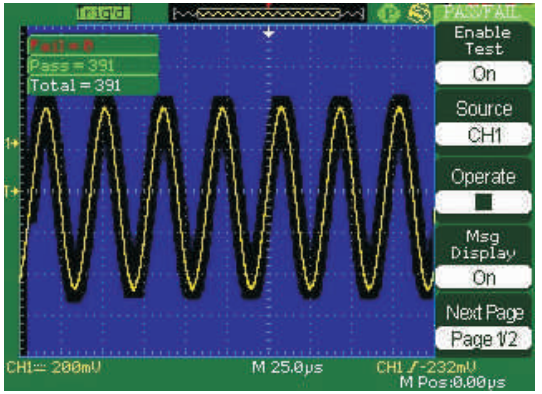

Table 2–61 Pass/Fail function menu 2:

Option	Setting	Introduction
Output	Pass	Output when pass condition detected.
	Fail	Output when fail condition detected.
Stop On Output	On	Stop test when output occur.
	Off	Continue test when output occur.
Mask Setting		Press this button to enter the Mask Setting menu.
Return		Return to the Pass/Fail main menu.
Next Page	Page 2/2	Return the first page of the Pass/Fail menu.

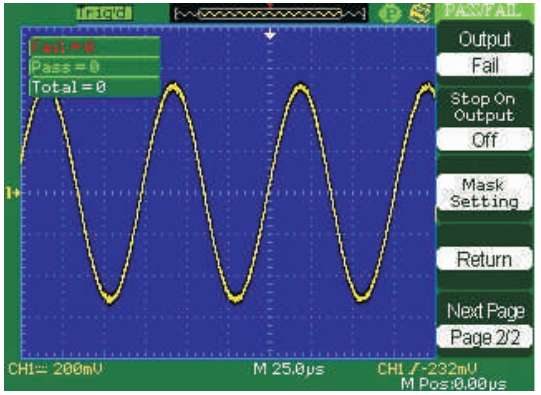

Table 2–62 Mask Setting function menu 1:

Option	Setting	Introduction
X Mask xdiv		Turn the Universal knob to set the range of horizontal clearance to the waveform. <0.04div–4.00div>
Y Mask ydiv		Turn the Universal knob to set the range of vertical clearance to the waveform. <0.04div–4.00div>
Create Mask		Create a test mask according to the above clearance.
Location	Internal External	Select position to store created mask.
Next Page	Page 1/2	Press this button to enter the second page of Mask Setting menu.

Table 2–63 Mask Setting function menu 2:

Option	Setting	Introduction
Save		Store created mask setting.
Load		Recall stored mask setting.
Return		Return to the main menu of mask setting.
Last Page	Page 2/2	Return to the first page of the Mask Setting menu.

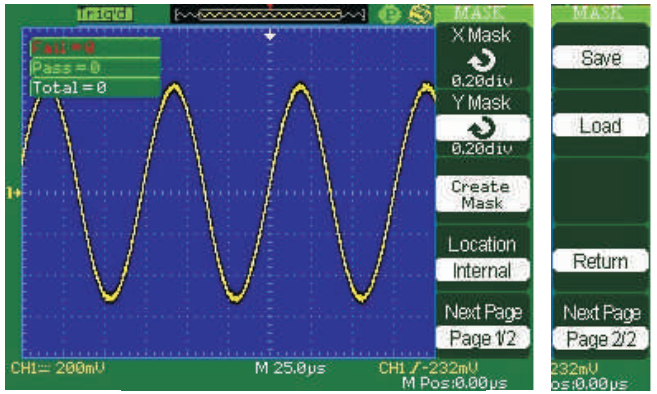

RUN Pass/Fail test, please follow next page:

- Press UTILITY button to enter the Utility menu.
- Press the Next Page Page1/4 option button.
- Press the Next Page Page2/4 option button to enter the third page of Utility menu
- Press the Pass/Fail option button to enter the Pass/Fail function menu.
- Press the Enable Test option button to select On.
- Press the Source option button to select input signal channel.
- Press the Next Page Page1/2option button to enter the second page of the Pass/Fail menu.
- Press the Mask Setting option button to enter the first page of Mask menu.
- Press the X Mask button; turn the Universal knob to adjust the horizontal clearance.
- Press the Y Mask button; turn the Universal knob to adjust the vertical clearance.
- Press the Create Mask button to create mask and you also can enter the next page of Mask menu to recall the stored mask.
- Enter the second page of Pass/Fail function menu, press the Output option button to set the output option.
- Enter the first page of Pass/Fail function menu, press the Operate option button to select to run the pass/fail test.

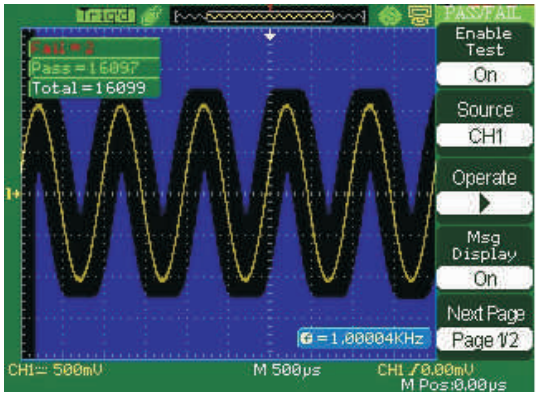

2.13.8 Waveform Record

Waveform recorder can record input waveform from CH1 and CH2, with a maximum record length of 2500 frames. This record behavior can also be activated by the pass/fail test output, which makes this function especially useful to capture abnormal signals in long term without keeping an eye watching it.

Waveform recorder: Record the waveforms with specified interval.

Table 2–64 Waveform recorder function menu:

Option	Setting	Introduction
Mode	Record	Set Record function menu.
	Play Back	Set Play Back function menu.
	Storage	Set Storage function menu.
	Off	Turn off waveform recorder menu.
Source	CH1 CH2 P/F–OUT	Select record source channel.
Interval		Set time interval between record frames.
End Frame		Set max number of record frames.
Operate	● Record	Press to start recording.
	■ Stop	Press to stop recording.

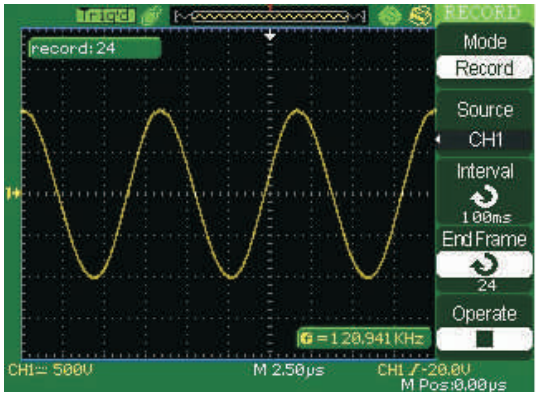

To record waveforms, follow these steps:

- Press the UTILITY button to enter Utility menu.
- Press the Next Page option button to enter the third page of Utility menu.
- Press the Record button to enter Waveform Record Menu.
- Press the Mode option button to select Record.
- Press the Source option button to select the input signal channel.
- Select Interval option, turn the Univeral knob to adjust time interval between record frames.
- Select End Frame, select the Universal knob to adjust the max record frame.
- Press ● n Operateoption to record waveform.

Play Back: Play back current record waveforms or saved record waveforms.

Table 2–65 Waveform play back function menu 1:

Option	Setting	Introduction
Mode	Play Back	Set the Play Back function menu.
Operate	▶ Run	Press to start playback playing.
	■ Stop	Press to stop playing.
Play Mode		Set circular play mode.
		Set single time play mode.
Interval		Set time interval between frames.
Next Page	Page 1/2	Enter the second page of Play Back menu.

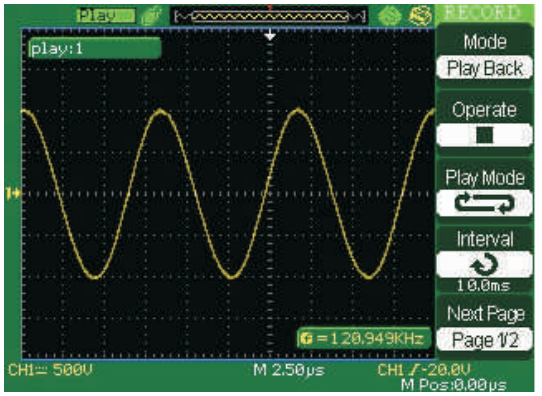

Table 2–66 Waveform play back function menu 2:		
Option	Setting	Introduction
Start Frame		Set start frame.
Curr_Frame		Select current frame to be played.
End Frame		Set End frame.
Return		Press to return the waveform recorder main menu.
Next Page	Page 2/2	Return to the first page of Play Back function menu.

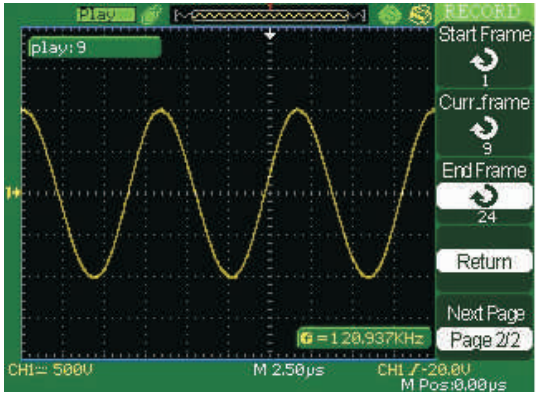

To play back current record waveforms, follow these steps:

- Press UTILITY button to enter Utility menu.
- Press the Mode option button to select Play Back.
- Press the Play Mode option button to select or
- Press the Interval option button to select time interval between play back frames.
- Press the Next Page 1/2 to enter the second page of Play Back function menu.
- Select the Start Frame option, turn the Universal knob to adjust the start frame of play back waveform.
- Select the End Frame option, turn the Universal knob to adjust the end frame of play back waveform.
- Press the Next Page 2/2 option button to return the first page of Play Back menu.
- Press the option button in Operate option to play back waveforms.

2.13.9 Recorder

The waveform recorder is a kind of seamless and no–gap real time recording of waveform, means oscilloscope can save and replay waveform every time it captured. It is similar to waveform recording instrument, and the biggest recording size of its internal memory is 6M.

Table 2–67 waveform recording function menu：	
Option	Description
Record	Record the waveform persistently
Replay	Replay recorded waveform, refer to table 2–66
Option	Set the recorder properly, refer to table 2–67
Return	Quit the recording function

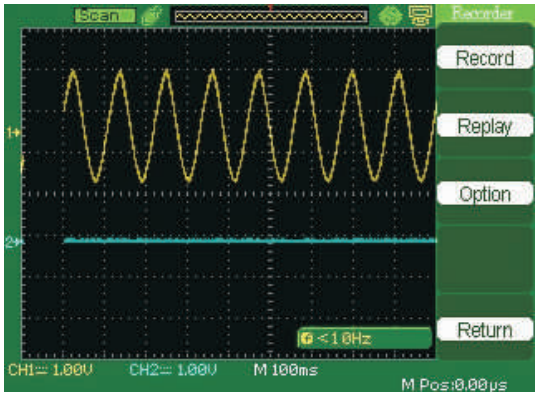

Table 2–68 waveform recall function menu	
Option	Description
Stop	Quit the auto–recalled waveform, then the waveform in EMS memory can be observed through altering the time base, the waveform in EMS memory can be moved left and right
Previous	Recall the waveform again
Next	Fast forward play the recalled waveform again
Return	Quit the recalling interface

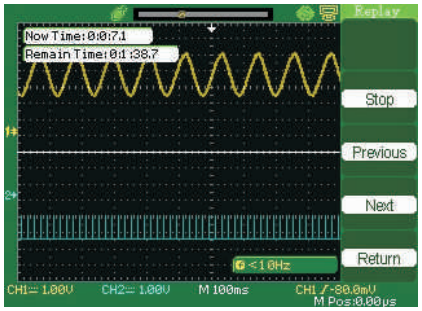

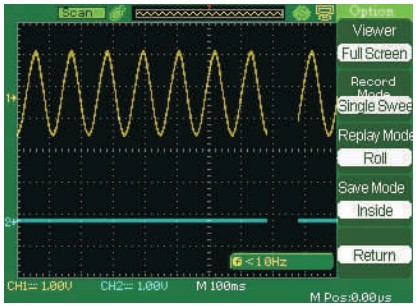

Table 2-69 Recorder's Setting Menu

Option	Setting	Description
Viewer	Full Screen	Waveform of Full screen recording and channel recalling
	Split	Waveform of recording on split screen and channel recalling,CH1 is displayed in upper half-screen, CH2 is displayed in lower half-screen.
Record	ModeRoll	Recorder saves the channel waveform persistently, the latter waveform will cover the former.
	Single Swee	Recorder will stop waveform saving when its memory is up to 6M.
Replay Mode	One by One	When recalling, the screen waveform refresh from left to right
	Roll	When recalling, screen waveform will refresh completely according to the capturing time of each frame
Return		Quit the recording setting interface

Recorder Operation step:

- Press the UTILITY button to enter Utility menu.
- Press the Next Page option button to enter the four page of Utility menu.
- Press the Recorder button to enter the Recorder manual.
- Press the Option button to select the parameter which you want by yourself
- Press the Recorder button to enter the Record menu and then Press the Start button to start record waveform
- After finished record waveform, then Press the Replay button to view the recorded waveform.

Note: 4Kpts memory depth Series don't have Recorder function ,only with on 32K/40K/2Mpts memory depth Series Oscilloscope

2.14 Online Help Function

The oscilloscope has an online help function that supplies multi-language help information, and you can recall them to help you operate the oscilloscope when you need.

Press the "HELP" button to enter the help status, then press every button to recall the corresponding help information. Note: If you want to see help information of SINGLE button and RUN/STOP button, you need to see them when you first enter the help status because you press the SINGLE button can enter next page of help information and Press the RUN/STOP button can return to the first page of help information when other button's help information exceed one page.

All submenus of every main menu have their help information. Note: If you want to see help information of next page submenus, first you need to press the "HELP" button to exit the help status and switch to next page menu then press the "HELP" knob to enter the help status again and press the submenu option buttons to see its help information.

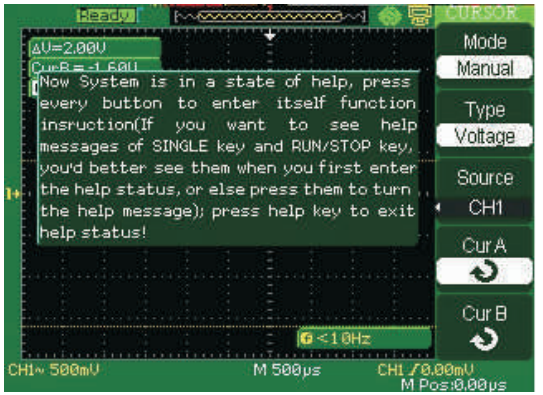
Ready
CURSOR
ΔU=2.00V
Now System is in a state of help, press every button to enter itself function insruction(If you want to see help messages of SINGLE key and RUN/STOP key, you'd better see them when you first enter the help status, or else press them to turn the help message); press help key to exit help status!
Mode
Manual
Type
Voltage
Source
CH1
Cur A
Cur B
<10Hz
CH1 500mV
M 500μs
CH1 0.00mV
M Pos:0.00μs

CHAPTER3 APPLICATION EXAMPLES

This section presents a series of application examples. These simple examples highlight the features of the oscilloscope and give you ideas for using it to solve your own test problems.

- Taking simple measurements
- Taking cursor measurements
- Capturing a single–shot signal
- Analyzing signal detail
- Triggering on a video signal
- Application of X–Y function
- Analyzing a differential communication signal using math functions

3.1Taking Simple Measurements

Observe a unknown signal in a circuit, display the signal quickly and measure the frequency and peak–to–peak amplitude.

1. Using Auto set

To quickly display a signal, follow these steps:

- Press the CH1 button, set the Probe option attenuation to 10X and set the switch to 10X on the probe.
- Connect the channel 1 probe to the signal.
- Press the AUTO button.

The oscilloscope sets vertical, horizontal, and trigger controls automatically. If you want to optimize the display of the waveform,
You can adjust these controls manually till you are satisfied with the waveforms

Note

1. The oscilloscope displays relevant automatic measurements in the waveform area of the screen based on the signal type detected.

1.Taking Automatic Measurements

The oscilloscope can take automatic measurements of most displayed signals.
To measure signal frequency and peak–to–peak amplitude, follow these steps:

(1) Measure signal frequency

- Input the signal to channel 1.
- Press the AUTO button.
- Press the MEASURE button to see auto Measure Menu.
- Press the top option button.
- Press the Time option button to enter the Time Measure menu.
- Press the Source option button to select input signal channel.
- Press the Type option button to select Freq.

The corresponding icon and measure value will display on the third option area.

(2) Measure signal peak–to–peak amplitude

- Press the MEASURE button to display auto measure menu.
- Press the top second option button.
- Press the Voltage option button to enter the Voltage measure menu.
- Press the Source option button to select input signal channel.
- Press the Type option button to select Vpp.

The corresponding icon and measure value will display on the third option area.

3.2 Taking Cursor Measurements

You can use the cursors to take time and voltage measurements of a waveform quickly

3.2.1 Measuring Ring Frequency

To measure the ring frequency at the rising edge of a signal, follow these steps:

- Press the CURSORS button to see the Cursor Menu.
- Press the Mode button to select Manual.
- Press the Type option button and select Time.
- Press the Source option button and selectCH1.
- Press the CurA button and turn the universal knob to place the cursor A on one peak of the ring.
- Press the Cur B button and turn the universal knob to place the cursor B on the nearest peak of the ring.

You can see the delta time and frequency (the measured ring frequency) on the top left of the screen.

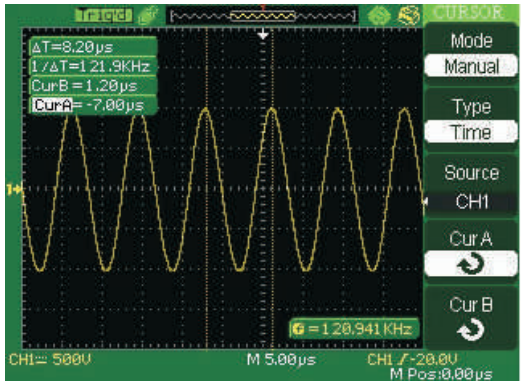

3.2.2 Measuring Ring Amplitude

To measure the amplitude, follow these steps:

- Press the CURSORS button to see the Cursor Menu.
- Press the Mode button to select Manual.
- Press the Type option button and select Voltage.
- Press the Source option button and select Ch1.
- Press the CurA option button and turn the universal knob to place the cursor A on the highest peak of the ring.
- Press the CurB option button and turn the universal knob to place the cursor B on the lowest peak of the ring.

You can see the following measurements on the top of the left screen:

- The delta voltage (peak–to–peak voltage of the ringing)
- The voltage at Cursor A.
- The voltage at Cursor B.

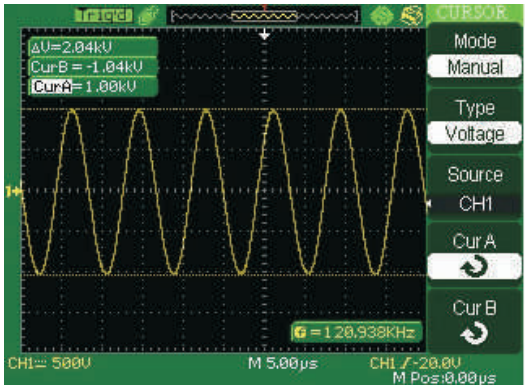

3.3 Catch the single signal

To capture a single event, you need to gather some pre–test knowledge of the signal in order to correctly set up the trigger level and slope .if you are not sure the instance of the signal, you can observe it through auto or normal trigger mode to ensure the trigger level and slope.

The following steps show you how to use the oscilloscope to capture a single event.

1. Set the Probe option attenuation to 10X and set the switch to 10X on the probe.
2. Trigger set up：
   - Press “TRIG MENU” button to show the “Trigger Menu”
   - Under this menu, set the trigger type to “edge”, Edge type is “Rising”, source is “CH1”, trigger mode is “Single”, coupling is “DC”
   - Adjust the horizontal time base and vertical scale to the satisfied range
   - Turn the “LEVEL” knob to adjust the trigger level
   - Press the “RUN/STOP” button to start capturing

When the trigger conditions are satisfied, data appears on the display representing; the data points that the oscilloscope obtained with one acquisition and press the RUN/STOP button again rearms the trigger circuit and erases the display.

3.4 Analyze the signal detail

You have a noisy signal displayed on the oscilloscope and you need to know more about it. You suspect that the signal contains much more detail than you can now see in the display.

3.4.1 Looking at a Noisy Signal

The signal appears noisy and you suspect that noise is causing problems in your circuit. To analyze the noise better, follow these steps：

- Press the ACQUIRE button to see the acquire menu.
- Press the Acquisition option button or turn the Universal knob to select Peak Detect.
- If necessary, press the DISPLAY button to see Display menu. Turn the Universal knob to adjust waveform intensity and grid brightness to see the noise more clearly.
- Peak detect emphasizes noise spikes and glitches in your signal, specially when the time base is set to a slow setting.

3.4.2 Separating the Signal from Noise

To reduce random noise in the oscilloscope display, follow these steps:

- Press the ACQUIRE button to display the acquire menu.
- Press the Acquisition option button or turn the Universal knob to select Average.
- Press the Averages option button to see the effects of varying the number of running averages on the waveform display.

Averaging reduces random noise and makes it easier to see the details of a signal.

3.5 Triggering on a Video Signal

Observe the video circuit in a piece of medical equipment and Use the video trigger to obtain a stable display.

3.5.1 Triggering on Video Field

To trigger on the video fields, follow these steps:

- Press the TRIGGER MENU button to see trigger menu
- Press the top option button and select Video.
- Press the source option button and select Ch1.
- Press the Sync option button and select Odd Field or Even Field.
- Press the Standard option button and select NTSC.
- Turn the horizontal S/Div knob to see a complete field across the screen.
- Turn the vertical Volts/Div knob to ensure that the entire video signal is visible on the screen.

3.5.2 Triggering on Video Lines

To trigger on the video lines, follow these steps:

- Press the TRIGGER MENU button to see the trigger menu
- Press the top option button and select Video.
- Press the Sync option button and select Line Num and turn the universal knob to set a specific line number.
- Press the Standard option button and select NTSC.
- Turn the S/Div knob to see a complete video line across the screen.
- Turn the Volts/Div knob to ensure that the entire video signal is visible on the screen.

signal must be centered in X

3.6. Application of X–Y function

Viewing Impedance Changes in a Network

Connect the oscilloscope to monitor the input and output of the circuit
To view the input and output of the circuit in an XY display, follow these steps:

- Press the CH 1 MENU button and set the Probe option attenuation to 10X.
- Press the CH 2 MENU button and set the Probe option attenuation to 10X.
- Set the switch of the probe to 10X.
- Connect the channel 1 probe to the input of the network, and connect the channel 2 probe to the output.
- Press the AUTO button.
- Turn the Volts/div knobs to display approximately the same amplitude signals on each channel.
- Press the DISPLAY button.
- Press the Format option button and select XY.

The oscilloscope displays a Lissajous pattern representing the input and output characteristics of the circuit.

- Turn the VOLTS/DIV and VERTICAL POSITION knobs to optimize the display.
- Press the Persist option button and select Infinite.
- Press the Intensity or Brightness option buttons and turn the Universal" knob to adjust the contrast of the screen.
- Apply the Ellipse method to observe the phase difference between the two channels

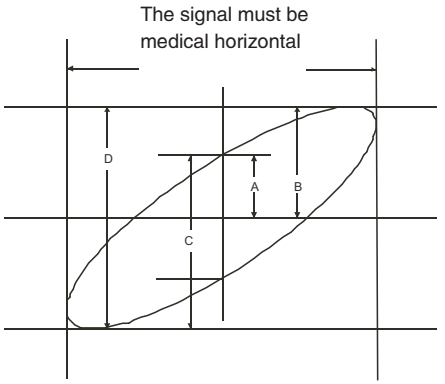

Sin =A/B or C/D where =phase shift (in degrees)between the two signals From the formula above ,you could get:=arcsine (A/B) or arcsine (C/D)If the main axis of the ellipse is at Ⅰ and Ⅲ quadrant , must be in the range of (0 ~ /2) or (3/2 ~ 2).
if the main axis is at Ⅰ and Ⅲ quadrant, must be in the range of (/2 ~) or (~ 3/2).

3.7 Analyzing a Differential Communication Signal

You are having intermittent problems with a serial data communication link, and you suspect poor signal quality. Set up the oscilloscope to show you a snapshot of the serial data stream so you can verify the signal levels and transition times. Because this is a differential signal, you use the math function of the oscilloscope to view a better representation of the waveform.

To activate the differential signals connected to channel 1 and channel 2, follow these steps:

- Press the CH 1 button and set the Probe option attenuation to 10X.
- Press the CH 2 button and set the Probe option attenuation to 10X.
- Set the switches to 10X on the probes.
- Press the AUTO button.
- Press the MATH button to see the Math Menu.
- Press the Operation option button and select – .
- Press the CH1 – CH2 option button to display a new waveform that is the difference between the displayed waveforms.
- You can adjust the vertical scale and position of the Math waveform. To do so, follow these steps:
  A. Remove the channel 1 and channel 2 waveforms from the display.
  B. Turn the CH 1 and CH 2 VOLTS/DIV and VERTICAL POSITION knobs to adjust the vertical scale and position.

Note

1. First be sure to compensate both probes. Differences in probe compensation appear as errors in the differential signal.

CHAPTER 4 PROMPTING MESSAGES AND TROUBLESHOOTING

4.1 Prompting messages:

- Trig level at limit!: Mention you that the trigger Level is at a limit when you turn the Trig level knob.
- Horizon position at limit! : Mention you that the horizontal position is at a limit when you turn the horizon position knob.
- Volts/Div at limit! : Mention you that the vertical voltage have already touched the Min 2MV/div or the Max 5V/div.
- Volts position at limit! : The system would display this information when the vertical position is at a limit.
- Sec/Div at limit! : Prompts that the Volts/Div is at full range while turning the vertical scale knob.
- Holdoff time at limit! : Turn the Universal knob when holdoff time has been to max or min value, now the system will clew this information.
- Functions isn't useable! : Under several special modes, the some functions could not be running.
- No signal! : The system would clew this information when the signal could not match the auto set condition. (Using in the auto set)
- Adjust at limit! : You could adjust the pulse width by the universal knob till the pulse width has reached min20.0ns or max 10.0s.
- Location Empty! : If you have no stored waveforms or setups on some location, the screen will display this information when you press the Recall button on this location.
- USB Flash Drive Plug In! : This information will appear when you invert the USB Flash Drive to the USB Host port.
- USB Flash Drive Pull Out! : This information will appear when you pull out the USB Flash Drive.
- Store Data Success! : Save setup data, waveform data or picture data to the internal of the oscilloscope or USB flash successful.
- Ready Data Success! : Read setup data or waveform data from the internal of the oscilloscope or USB flash successful.
- Please set Back USB to printer! : Press the S/div knob will appear this information on the screen when the Print Key option is set to Print Picture and the Back USB option is set to Computer.

■ USB Flash Drive isn't connected! : When the Save To option is set to File or the Print Key option is set to Save Picture in Save/Recall menu , Press the Save option button or the S/div knob before inverting the USB Flash Drive to the USB Host port will appear this information on the screen.

■ Record Wave Success! : This message will appear when you finish recording waveforms.

4.2 Troubleshooting

1. After the oscilloscope is powered on，the screen remains dark，please do as following steps：
   - Check the power cable's connection.
   - Ensure the power switch is turned on.
   - After the inspections above，restart the oscilloscope.
   - If the oscilloscope is still not used after the checking, please connect with MY company

2. If there is no signal wave in the screen after gathering the signal, please do as following steps:
   - Check the probe connecting with the signal cable or not
   - Check the signal cable connecting with the BNC connector or not.
   - Check the probe whether connect with the goods tested or not.
   - Check the tested goods produce the signal or not.
   - Gather the signal again.

3. The value of the tested voltage is 10 times higher/lower than the real one , please do as following steps:
   Check the attenuation quotient whether match the probe attenuation proportion or not.

4. Display the wave, but not steady , please do as following steps:
   - Check the signal source on the trigger interface whether or not matches the signal channel.
   - Check the trigger mode: normal signal should use the edge trigger mode. The video signal should use the Video Trigger mode. The signal would display steady, only using the matching trigger mode.
   - Attempt to change the coupling into HF Reject or LF Reject display, so that the High/low frequency noise disturb the trigger should be filtrated

5. Press RUN/STOP button, but no display.

   Check the trigger mode on the trigger interface whether or not in the normal or single, and check the trigger level is whether or not over the wave range. If yes, please put the trigger level to the middle position or set the trigger mode to the Auto position. In another hand, you could choose the Auto button to set up automatically.

6. After the Acquisition is set to Averages or Display Persistence time is set too long, the waveform refreshes slowly.
   It is normal in these settings

7. The signal is displayed as ladder like waveform
   - This phenomenon is normal. The time base maybe is too slow .you should turn the horizontal SCALE knob to increase horizontal resolution to improve the display.
   - Maybe the display Type is set to Vectors, You could set it to Dots mode to improve the display.

CHAPTER 5 SERVICE AND SUPPORT

5.1 Maintain summary

MY Company warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of three (3) years from the date of shipment from an authorized MY company's distributor. If a product or CRT proves defective within the respective period, MY company will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest MY company's sales and service office.

Except as provided in this summary or the applicable warranty Statement, MY company makes no warranty of any kind, express or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose. In no Event shall MY company be liable for indirect, special or Consequential damages

APPENDIX A: SPECIFICATIONS

All specification applies to 10X probe and All the Digital Storage Oscilloscopes.
To verify that the oscilloscope meets specifications, the oscilloscope must first meet the following conditions:

- The oscilloscope must have been operating continuously for thirty minutes within the specified operating temperature.
- You must perform the Do Self Cal operation, accessible through the Utility menu, if the operating temperature changes by more than 5 C.
- The oscilloscope must be within the factory calibration interval
  All specifications are guaranteed unless noted typical.

Specifications

Inputs	
Input Coupling	AC, DC, GND
Input Impedance	1MΩ+/–2% ‖ 17pF ± 3pF
Maximum input voltage	400V（DC+AC PK–PK，1MΩ input impedance），CAT I,CAT II
Probe attenuator	1X、10X
Probe attenuator Factors Set	1X、10X、100X、1000X

Horizontal System	
Real Time Sampling Rate	4Kpts memory depth Series: Single Channel:500MSa/s,Double Channel: 250MSa/s （When timebase faster than 250ns/div) 32K/40K/2Mpts memory depth Series: Single Channel:1GSa/s,Double Channel: 500MSa/s （When timebase faster than 50ns/div) 5Kpts/CH memory depth Series: 1GSa/CH
Equivalent Sampling Rate	50GSa/s
Measure Display Modes	MAIN, WINDOW, WINDOW ZOOM, SCAN , X–Y
Timebase Accuracy	± 100ppm measured over 1ms interval
Horizontal Scan Range	2.5nS/DIV – 50S/DIV
	SCAN: 100mS/DIV ~ 50S/DIV (1–2.5–5 sequence)

Vertical System	
Vertical Sensitivity	4K/5Kpts memory depth Series: 2mV/div – 5V/div(1–2–5 order)500Msa/s series 32K/40K/2Mpts memory depth Series: 2mV/div – 10V/div(1–2–5 order)1Gsa/s series
Channel Voltage Offset Range	4K/5Kpts memory depth series: 2mV – 100mV: ± 2V 102mV – 5V:40V
	32K/40K/2Mpts memory depth Series: 2mV–200mV: ± 1.6V 206mV–10V: 40V
Vertical Resolution	8 bit
Channels	2
Analog Bandwidth	25MHz ,40MHz,60 MHz,100 MHz,150MHz,200MHz
Single–shot Bandwidth	25MHz ,40MHz,60 MHz,100 MHz,150MHz,200MHz
Lower frequency limit (AC –3dB)	≤10Hz(at input BNC)
DC Gain Accuracy	≤ ± 3.0%: 5mv/div to 5V/div in Fixed Gain Ranges
	≤ ± 4.0%:typical for 2mv/div and Variable Gain Ranges
DC Measurement Accuracy: All Gain settings≤100mv/div	± [3%X (|reading|+|offset|) +1% of |offset| +0.2div+2mv]
DC Measurement Accuracy:All Gain settings > 100mv/div	± [3%X (|reading|+|offset|) +1% of |offset| +0.2div+100mv]
Rise time	<1.2ns bandwidth at 200MHz
	<2.4ns bandwidth at 150MHz
	<3.5ns bandwidth at 100MHz
	<5.8ns bandwidth at 60MHz
	<8.8ns bandwidth at 40MHz
	<14ns bandwidth at 25MHz
Vertical input coupling	AC, DC, GND
Math operation	+, –, *, FFT
FFT	Window mode: Hanning, Hamming, Blackman, Rectangular
	Sampling points: 1024
Bandwidth limiter	20MHZ ± 40% Typical (Note: 25MHZ bandwidth oscilloscope don't have this function,BW limited below 20MHZ ± 40% when using probe X1)

Measure System	
Auto Measure (32 Types)	Vpp, Vmax, Vmin, Vamp, Vtop, Vbase, Vavg, Mean, Crms, Vrms, ROVShoot, FOVShoot, RPREShoot, FPREShoot, Rise time, Fall time, Freq, Period,+ Wid, – Wid, + Dut, – Dut, BWid, Phase, FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF
Cursor Measure	Manual mode, Track mode and Auto mode

Trigger System	
Trigger Types	Edge, Pulse Width, Video, Slope, Alternative
Trigger Source	CH1、CH2、EXT、EXT/5、AC Line
Trigger Modes	Auto, Normal, Single
Trigger Coupling	AC, DC, LF rej, HF rej
Trigger Level Range	CH1,CH2: 6divisions from center of screen
	EXT: 1.2V
	EXT/5: 6V
Trigger Displacement	Pre–trigger：(Memory depth/ (2*sampling)) ,
	Delay Trigger: 260DIV
Holdoff range	100ns 1.5s
Edge Trigger	Edge type: Rising, Falling, Rising and Falling
Pulse Width Trigger	Trigger Modes: (> , < , =)positive Pulse Width, (> , < , =)Negative Pulse Width
	Pulse Width Range: 20ns 10s
Video Trigger	Support signal Formats: PAL/SECAM, NTSC
	Trigger condition : odd field, even field, all lines, line Num
Slope Trigger	(> , < , =) Positive slope, (> , < , =) Negative slope
	Time: 20ns–10s
Alternative Trigger	CH1 trigger type: Edge, Pulse, Video, Slope
	CH2 trigger type: Edge, Pulse, Video, Slope

Hard Ware Frequency Counter	
Reading resolution	6 Bytes
Range	DC Couple, 10Hz to MAX Bandwidth
Signal Types	Satisfying all Trigger signals(Except Pulse width trigger and Video Trigger)

X–Y Mode	
X–pole Input / Y–Pole Input	Channel 1 (CH1) / Channel 2 (CH2)
Phase Error	3 degrees
Sample Frequency	XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s and 4Kpts memory depth Series supports 5KSa/s～200MSa/;5KSa/s ~ 200MSa/s, 32K/40K/2Mpts memory depth Series :25KSa/s ~ 100MSa/s,

Control Panel Function	
Auto Set	Auto adjusting the Vertical, Horizontal system and Trigger Position
Save/Recall	Support 2 Group referenced Waveforms,20 Group setups,20 Group captured Waveforms internal Storage/Recall function and USB flash driver storage function.

Acquisition System	
Sample Types	Real time, Equivalent time
Peak Detect	Captures glitches down to 10ns wide regardless of sample rate
Sample Mode	Sample， Peak Measure, Average
Averages	4,16,32,64,128,256

Generic Specification

Display System	
Display Mode	Color TFT 5.7in.(145mm)diagonal Liquid Crystal Display Color TFT 7in.(178mm)diagonal Liquid Crystal Display
Resolution	320 horizontal by 234 vertical pixels 480 horizontal by 234 vertical pixels
Display Color	64K color
Display Contrast (Typical state)	150:1
Backlight Intensity (Typical state)	300nit
Wave display range	8 x 12 div&8 × 18 div

Wave Display Mode	Point, Vector
Persist	Off, 1 sec, 2 sec, 5 sec, Infinite
Menu Display	2 sec, 5 sec, 10 sec, 20 sec, Infinite
Screen–Saver	Off,1min,2min,5min,10min,15min,30min, 1hour,2hour,5hour
Skin	Classical, Modern, Tradition, Succinct
Waveform interpolation	Sin(x)/x, Linear
Color model	Normal , Invert
Language	Simplified Chinese, Traditional Chinese, English, Arabic, French, German, Russian, Spanish, PortugueseJapanese, Korean, Italian

Environments	
Temperature	Operating:10℃ to +40℃
	Not operating: –20℃ to +60℃
Cooling	The fan forces it cold.
Humidity	Operating: 85%RH, 40℃, 24 hours
	Not operating: 85%RH, 65℃, 24 hours
Height	Operating: 3000m; Not operating: 15,266m

Power Supply	
Input Voltage	100–240 VAC, CAT II, Auto selection
Frequency Scope	45Hz to 440Hz
Power	50VA Max

Mechanical		
Dimensionlength	305 mm	339 mm
Width	133 mm	110.5 mm
Height	154 mm	148.5 mm
Weight	2.3 kg	2.4 kg

APPENDIX B: OSCILLOSCOPE ACCESSORIES

Standard Accessories：

- 1:1/10:1 probe (2 Purchase)
- Power Cable that fits the standard of destination country
- Certification.
- Guaranty cards
- CD(including EasyScope3.0 computer software system)
- User Manual
- USB cable

APPENDIX C: DEFAULT SETUP

Menu or System	Options、Knobs or Buttons	Default Setup
CH1 CH2	Coupling	DC
	BW limit	Off
	Volts/div	Coarse
	Probe	1X
	Invert	Off
	Filter	Off
	Volts/div	1.00V
MATH	Operation	CH1+CH2
	CH1 invert	Off
	CH2 invert	Off
	FFT operation:	
	Source	CH1
	Window	Hanning
	FFT Zoom	1X
	Scale	dBVrms
	Display	Split
HORIZONTAL	Window	Main
	Position	0.00 μ s
	Sec/div	500 μ s
	Window Zone	50.0 μ s
	Trigger knob	level
CURSOR	Type	Off
	Source	CH1
	Horizontal (voltage)	+/–3.2divs
	Vertical (time)	+/–5divs
MEASURE	Source	CH1
	Type	average
ACQUIRE	three mode options	Sampling
	Averages	16
	Sampling mode	Real Time
DISPLAY	Type	Vectors
	Persist	off
	Gird	▦
	Intensity	60%
	Brightness	40%
	Format	YT
	Menu Display	infinite
SAVE/RECALL	Type	Setups
	Save To	Device
	Setup	No.1
REF	REFA/REFB	REFA
	Source	CH1
	REFA	Off
	REFB	Off
UTILITY	Sound	On
	Counter	On
	Back USB	Computer
	Pass/Fail	off
	Record	off
	RS–232 Baud	9600

TRIGGER (edge)	Type	edge
	Source	CH1
	Slope	Rising
	Mode	Auto
	Coupling	DC
	LEVEL	0.00V
TRIGGER (pulse)	Type	pulse
	Source	CH1
	When	=
	Set Pulse Width	1.00ms
	Mode	Auto
	Coupling	DC
TRIGGER (Video)	Type	Video
	Source	Ch1
	Polarity	Normal
	SyncAll	Lines
	Standard	NTSC
	Mode	Auto
TRIGGER (Slope)	Type	Slope
	Source	CH1
	Time	1.00ms
	Mode	Auto
TRIGGER (Alternative)	Type	Alternative
	Source	CH1
	Mode	Edge
	Coupling	DC

APPENDIX D: DAILY MAINTAIN AND CLEANING

Daily Maintain

DO not store or leave the instrument in where the LCD display will be exposed to direct sunlight for long periods of time.
CAUTION: To avoid damage to the instrument or probes, do not expose them to sprays, liquids, or solvents

Cleaning

If this instrument requires cleaning, disconnect it from all power sources and clean it with a mild detergent and water. Make sure the instrument is completely dry before reconnecting it to a power source.

To clean the exterior surface, perform the following steps:

- Remove loose dust on the outside of the instrument and probes with a lint–free cloth. Use care to avoid scratching the clear plastic display filter.
- Use a soft cloth dampened with water to clean the instrument. Use an aqueous solution of 75% isopropyl alcohol for more efficient cleaning.

> Note
> 1. To avoid damage to the surface of the instrument or probes, do not use any abrasive or chemical cleaning agents.